



Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Transmission housing	-	-	-	-	g.ghi	GU01350350	1
2	Roller bearing	-	-	-	-	-	GU92252225	1
	Ring	-	-	-	-	-	GU92259025	1
3	Ext. plate	-	-	-	-	g.ghi	GU01351050	1
4	Int. plate	-	-	-	-	g.ghi	GU01352150	1
5	Support	-	-	-	-	-	GU01350950	1
6	Oil plug	-	-	-	-	-	GU28351260	1
7	Gasket 20,1x28x2	-	-	-	-	-	GU95100709	1
8	Oil level plug	-	-	-	-	-	GU95980214	1
9	Gasket	-	-	-	-	-	GU10528900	2
10	Gasket ring	-	-	-	-	-	GU90403850	1
11	Gasket ring	-	-	-	-	-	GU12351100	1
12	Roller bearing 40x55x17	-	-	-	-	-	GU92254340	1
13	Gasket ring	-	-	-	-	-	GU90403552	1
14	Tap.roller bearing 25x5	-	-	-	-	-	GU92249227	2
15	Flange	-	-	-	-	-	GU18352400	1
16	Gasket 58,42x2,62	-	-	-	-	-	GU90706584	2
17	Spacer	-	-	-	-	-	GU18355100	1
18	Shim 0,15 mm	-	-	-	-	-	GU12355203	1
	Shim 0,1 mm	-	-	-	-	-	GU12355202	1
19	Spacer 1,9 mm	-	-	-	-	-	GU19355329	1
	Spacer 1,7 mm	-	-	-	-	-	GU19355327	1
	Spacer 1 mm	-	-	-	-	-	GU19355320	1
	Spacer 1,8 mm	-	-	-	-	-	GU19355328	1
	Spacer 1,6 mm	-	-	-	-	-	GU19355326	1
	Spacer 1,5 mm	-	-	-	-	-	GU19355325	1
	Spacer 1,4 mm	-	-	-	-	-	GU19355324	1
	Spacer 1,3 mm	-	-	-	-	-	GU19355323	1
	Spacer 1,2 mm	-	-	-	-	-	GU19355322	1
	Spacer 1,1 mm	-	-	-	-	-	GU19355321	1
20	Screw M8X25	-	-	-	C2	-	GU19357660	8
	Screw M8X25	-	-	-	C1	-	GU98054425	8
21	Spring washer 8x15x0,3	-	-	-	C1	-	GU61270300	8

	Washer 8,4X13X0,8	-	-	-	-	-	GU14615901	8
22	Plate	-	-	-	C1	-	GU95187008	8
	Gasket	-	-	-	-	-	GU17350700	0
23	Flange	-	-	-	-	-	GU17350400	1
24	Gasket	-	-	-	-	-	GU17350700	2
25	Spacer 1,2 mm	-	-	-	-	-	GU17355408	1
	Spacer 0,9 mm	-	-	-	-	-	GU17355402	1
	Spacer 1 mm	-	-	-	-	-	GU17355404	1
	Spacer 1,1 mm	-	-	-	-	-	GU17355406	1
	Spacer 1,5 mm	-	-	-	-	-	GU17355412	1
	Spacer 1,3 mm	-	-	-	-	-	GU17355410	1
	Spacer 0,8 mm	-	-	-	-	-	GU17355400	1
26	Ball bearing 70x110x13	-	-	-	-	-	GU92201070	1
27	Gasket ring	-	-	-	-	-	GU90407085	1
28	Drive flange	-	-	-	-	-	GU17351400	1
29	Bevel gear 8/33	-	-	-	-	-	GU30354602	1
30	Screw	-	-	-	-	-	GU12356300	1
31	Washer 8,4X13X0,8	-	-	-	-	-	GU14615901	1
32	Nut	-	-	-	-	-	GU30356700	1
33	Lock	-	-	-	-	-	GU30358100	1
34	Clearance washer	-	-	-	-	-	GU18214650	1
35	Washer	-	-	-	-	-	GU37359005	1
36	Stud bolt	-	-	-	-	-	GU01357900	1
37	Screw	-	-	-	-	-	GU98610455	1
38	Screw	-	-	-	-	-	GU30558700	1
39	Screw	-	-	-	-	-	GU98054530	1
40	Oil unload plug M10X1	-	-	-	-	-	GU31003766	1
41	Snap ring	-	-	-	-	-	GU90271020	1
42	Self-locking nut M6X1	-	-	-	-	-	GU92630506	1
43	Washer 10,5x16x1	-	-	-	-	-	GU19149800	1
44	Washer	-	-	-	-	-	GU95000210	1

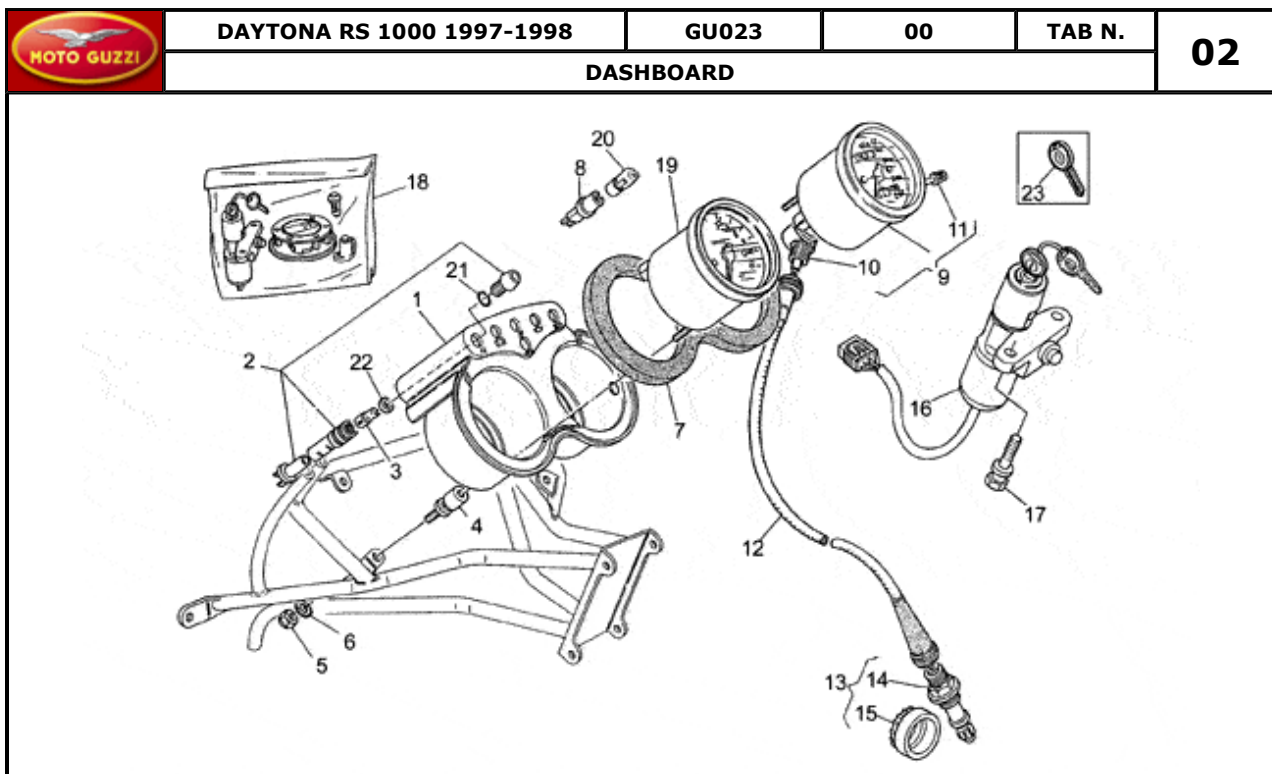


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Instrument container	-	-	-	-	GU30766200	1	
2	Indicator lamp, green	-	-	-	-	GU30758000	2	
	Indicator lamp, red	-	-	-	-	GU30758100	2	
	Indicator lamp, blue	-	-	-	-	GU30758200	1	
	Indicator lamp, orange	-	-	-	-	GU30758330	1	
3	Lamp 12V 2W	-	-	-	-	GU93450134	6	
4	Silent-block	-	-	-	-	GU30503600	4	
5	Nut	-	-	-	-	GU92602205	4	
6	Notched washer	-	-	-	-	GU95021105	4	
7	Vibration-damping rubber	-	-	-	-	GU30765100	1	
8	Lampholder	-	-	-	-	GU14768650	2	
9	Speedometer Mhp	-	-	USA	-	GU28762451	1	
	Speedometer	-	-	-	-	GU01761550	1	
	Speedometer Mhp	-	-	UK	-	GU14761570	1	
10	Gear 60°	-	-	-	-	GU23768310	1	
	Gear 90°	-	-	UK-USA	-	GU17768360	1	
11	Knob	-	-	-	-	GU28762860	1	
12	Odometer cable	-	-	-	-	GU01760400	1	
	Speedometer transmission	-	-	UK-USA	-	GU37760405001	1	
13	Gear Z5/11	-	-	-	-	GU14762510	1	
14	Pinion Z5	-	-	-	-	GU12763300	1	
15	Chain ring Z11	-	-	-	-	GU14766110	1	
16	Main switch - steering lock	-	-	-	-	GU01782500	1	
17	Shear rivet	-	-	-	-	GU66468115	2	
18	Lock hardware kit	-	-	-	-	GU01736820	1	
19	Electronic revolution counter	-	-	-	-	GU01767250	1	
20	Lamp 12v-3w	-	-	-	-	GU93450120	2	
21	O-ring	-	-	-	-	GU90706087	6	
22	Washer	-	-	-	-	GU90714101	6	
23	Non indented key blank	-	-	-	-	GU01735500	1	


	<b>DAYTONA RS 1000 1997-1998</b>	<b>GU023</b>	<b>00</b>	<b>TAB N.</b>	<b>03</b>
	<b>USA-SGP FUEL FUME CLEANER</b>				

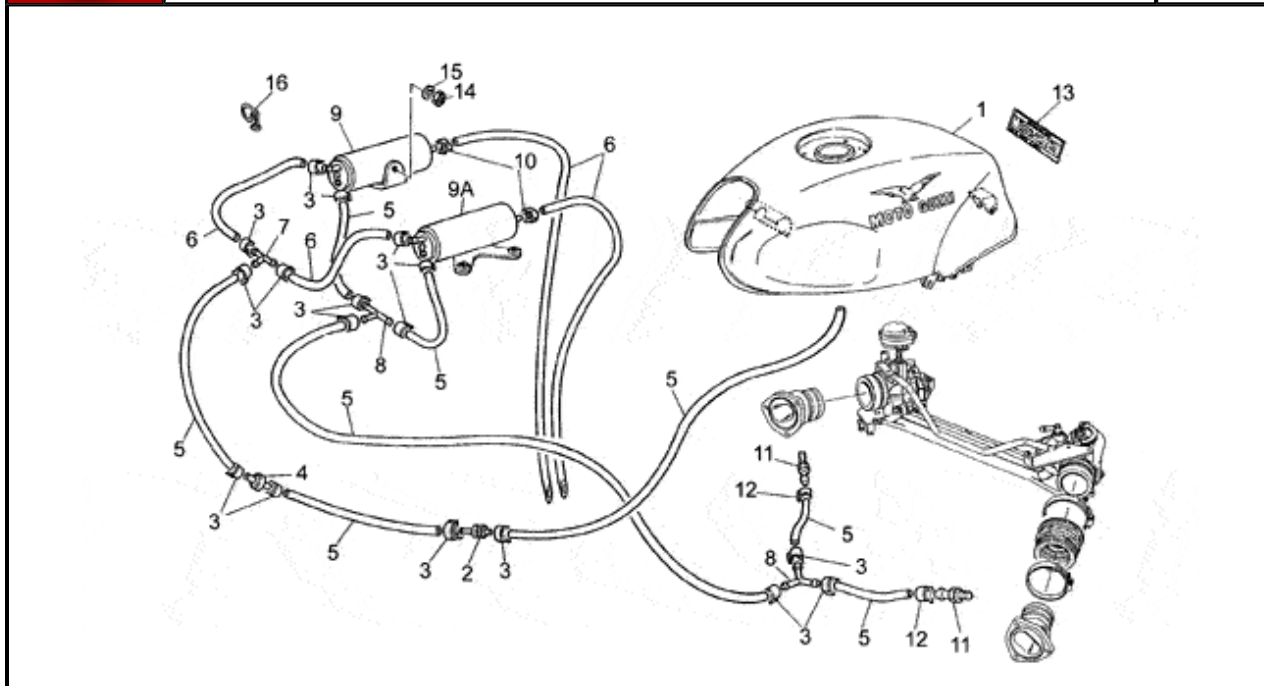

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Fuel tank	-	-	-	-	r.guz GU01100256	1	
	Fuel tank	-	-	-	-	gr GU01100220	1	
2	Oil breather valve	-	-	-	-	GU29104985	1	
3	Hose clamp	-	-	-	-	GU29108550	20	
4	Pressure valve	-	-	-	-	GU01102520	1	
5	Pipe SAEJ30R76X121/4"	-	-	-	-	GU00823956060	1	
6	Rubber pipe 12,5X7,8 5/16"	-	-	-	-	GU00823956080	1	
7	3-way union	-	-	-	-	GU30106620	1	
8	3-way union	-	-	-	-	GU29106660	2	
9	LH carbon filter	-	-	-	-	GU01116021	1	
	RH carbon filter	-	-	-	-	GU01116020	1	
10	Hose clamp	-	-	-	-	GU28157950	2	
11	Union	-	-	-	-	GU30115220	2	
12	Hose clamp	-	-	-	-	GU93305008	2	
13	Decal "Attention"	-	-	-	-	GU30944300	1	
14	Nut M6x1	-	-	-	-	GU92630106	2	
15	Washer 6,15x11x0,8	-	-	-	-	GU95004206	2	
16	Eyelet	-	-	-	-	GU31659720	2	

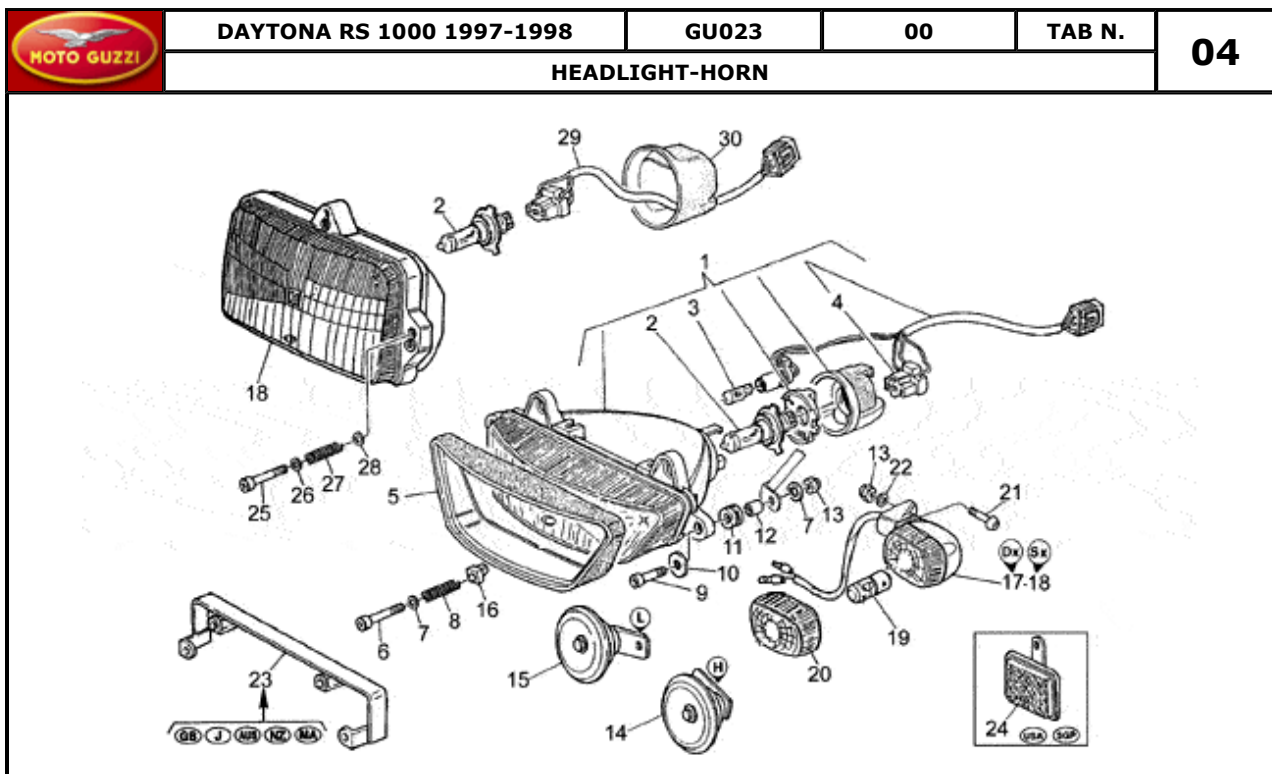


Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Headlight	-	-	AUS-J-MAL-NZ-UK	-	GU01740505	1	
	Cpl headlightsteering headligh	-	-	SGP	-	GU30740515	1	
	Headlight	-	-	USA	-	GU30740520	1	
	Headlight	-	-	-	-	GU01740500	1	
2	Lamp 12V-55/60W	-	-	-	-	GU93450232	1	
3	Lamp 12v-3w	-	-	-	-	GU93450120	1	
4	Lampholder	-	-	-	-	GU14756255	1	
5	Light frame	-	-	-	-	GU30741800	1	
6	Screw	-	-	-	-	GU98620340	1	
7	Washer	-	-	-	-	GU95000206	3	
8	Spring	-	-	-	-	GU94321124	1	
9	Hex socket screw M6X25	-	-	-	-	GU98622325	2	
10	Washer 6,4x12x1,2	-	-	-	-	GU95100141	2	
11	Rubber spacer	-	-	-	-	GU91551082	2	
12	Spacer	-	-	-	-	GU91180709	2	
13	Nut M6x1	-	-	-	-	GU92630106	4	
14	Horn H	-	-	-	-	GU31743765	1	
15	Horn L	-	-	-	-	GU31743766	1	
16	Block	-	-	-	-	GU29742160	1	
17	Rear RH turn indicator	-	-	-	-	GU30751601	1	
18	Rear LH turn indicator	-	-	-	-	GU30750601	1	
19	Lamp 12V-10W	-	-	-	-	GU93450127	2	
20	Turn indicator lens	-	-	-	-	GU30753701	2	
21	Screw	-	-	-	-	GU98230620	2	
22	Washer 5,3x10x0,5	-	-	-	-	GU95100121	2	
23	Support plate	-	-	AUS-J-MAL-NZ-UK	-	GU37593615	1	
24	Reflector	-	-	SGP-USA	-	GU48745880	2	
25	Screw	-	-	SGP-USA	-	GU98620235	3	
26	Washer	-	-	SGP-USA	-	GU95007205	3	
27	Lever return spring	-	-	SGP-USA	-	GU94321105	3	
28	Washer 5,25x14x1,5	-	-	SGP-USA	-	GU95100059	3	
29	Headlight wiring w/harness	-	-	USA	-	GU01747420	1	
	Headlight wiring w/harness	-	-	SGP	-	GU01747450	1	
30	Front headlight guard	-	-	SGP-USA	-	GU30741315	1	

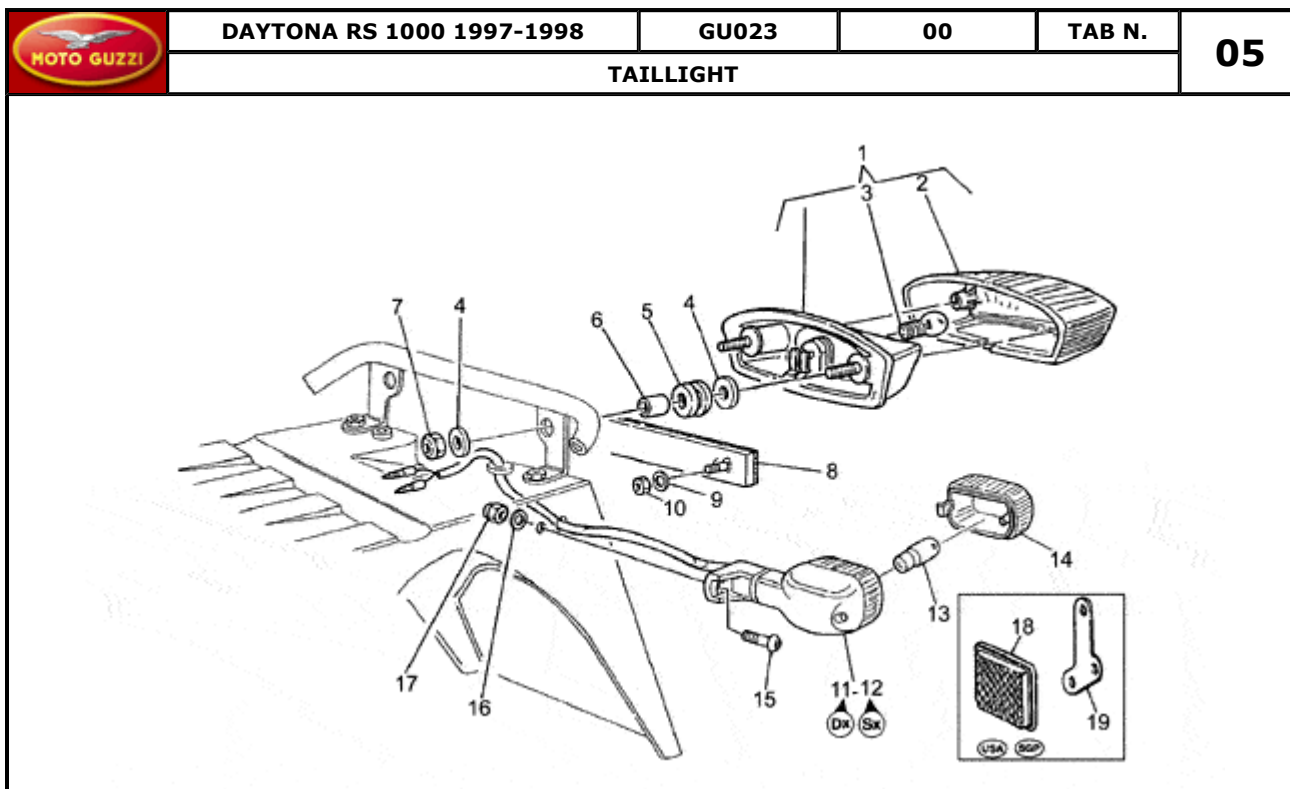


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Taillight	-	-	-	-	GU31740960	1	
2	Taillight lens	-	-	-	-	GU31741760	1	
3	Lamp 12V/5-21W	-	-	-	-	GU93450224	1	
4	Washer 6,4x12x1,2	-	-	-	-	GU95100141	4	
5	Rubber spacer	-	-	-	-	GU91551082	2	
6	Spacer	-	-	-	-	GU91180608	2	
7	Nut M6x1	-	-	-	-	GU92630206	2	
8	Rear reflector	-	-	-	-	GU28745800	1	
9	Washer	-	-	-	-	GU95129080	2	
10	Nut	-	-	-	-	GU92602204	2	
11	Rear LH turn indicator	-	-	-	-	GU30750601	1	
12	Rear RH turn indicator	-	-	-	-	GU30751601	1	
13	Lamp 12V-10W	-	-	-	-	GU93450127	2	
14	Turn indicator lens	-	-	-	-	GU30753701	2	
15	Screw	-	-	-	-	GU98230620	2	
16	Washer 5,3x10x0,5	-	-	-	-	GU95100121	2	
17	Nut M6x1	-	-	-	-	GU92630106	2	
18	Rear reflector, red	-	-	SGP-USA	-	GU14781570	2	
19	Reflector support	-	-	SGP-USA	-	GU30781820	2	



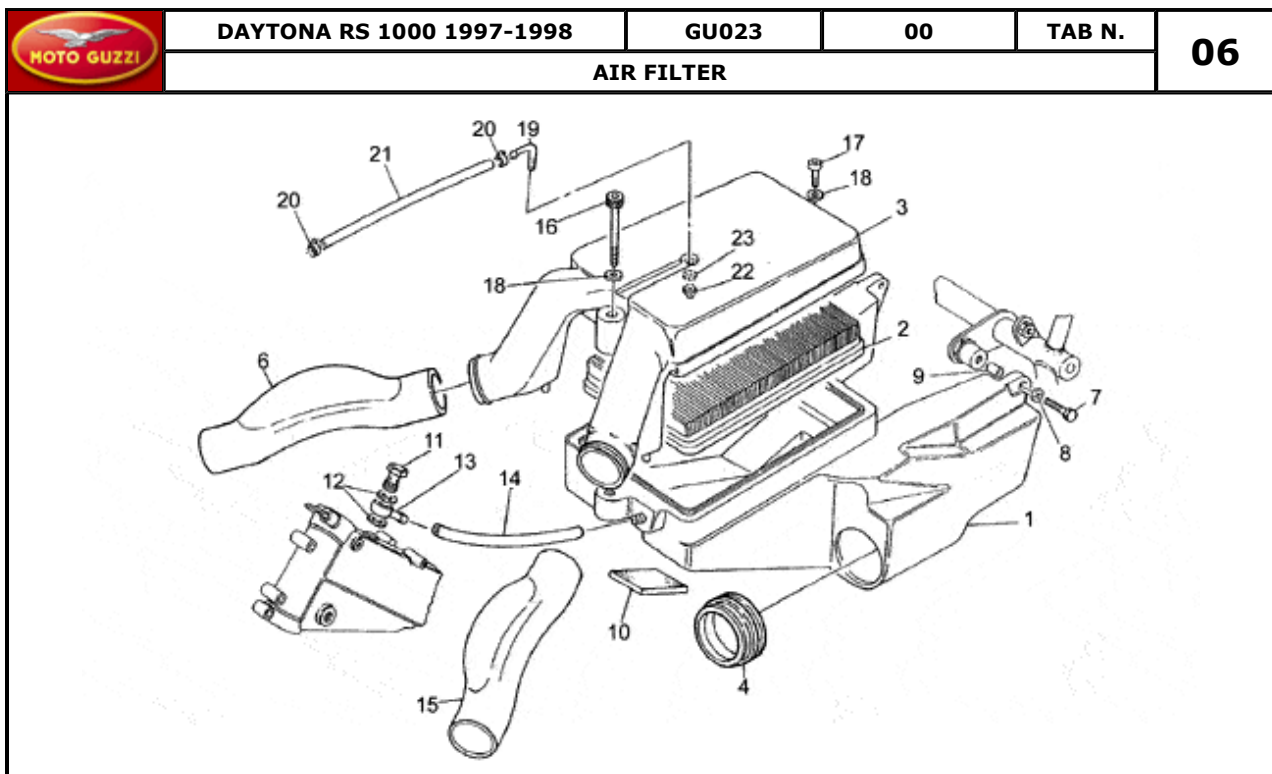


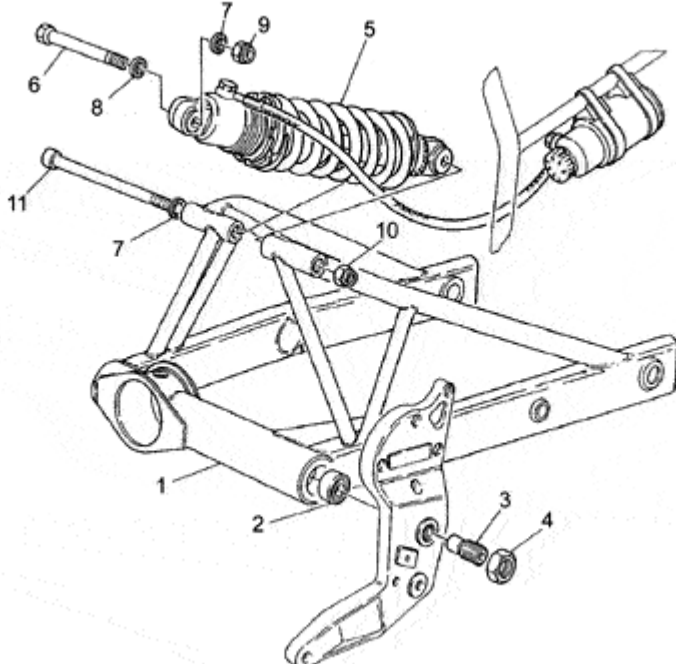
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Air box	-	-	-	-	GU01114050	1	
2	Air filter	-	-	-	-	GU30113600	1	
3	Air filter cover	-	-	-	-	GU37113405	1	
4	Intake hose	-	-	-	-	GU01114850	2	
6	RH Intake connector	-	-	-	-	GU01116950	1	
	RH Intake connector	-	-	CH	-	GU01116952	1	
7	Screw	-	-	-	-	GU98052330	2	
8	Washer	-	-	-	-	GU95000206	2	
9	Spacer	-	-	-	-	GU91180721	2	
10	Vibration-damping rubber	-	-	-	-	GU17489645	1	
11	Bored screw	-	-	-	-	GU95990084	1	
12	Gasket	-	-	-	-	GU10154200	2	
13	Union	-	-	-	-	GU30107401	1	
14	Pipe SAEJ30R9	-	-	-	-	GU00823952080	1	
15	LH Intake connector	-	-	-	-	GU01116951	1	
	LH Intake connector	-	-	CH	-	GU01116953	1	
16	Screw	-	-	-	-	GU98610365	1	
17	Hex socket screw M6X25	-	-	-	-	GU98622325	1	
18	Washer 6,15x11x0,8	-	-	-	-	GU95004206	2	
19	Breather pipe	-	-	-	-	GU37116305	1	
20	Hose clamp D9	-	-	-	-	GU61108500	2	
21	Pipe SAE30 R73/16"	-	-	-	-	GU00823956050	1	
22	Nut M6x1	-	-	-	-	GU92630206	1	
23	Gasket	-	-	-	-	GU37111705	1	




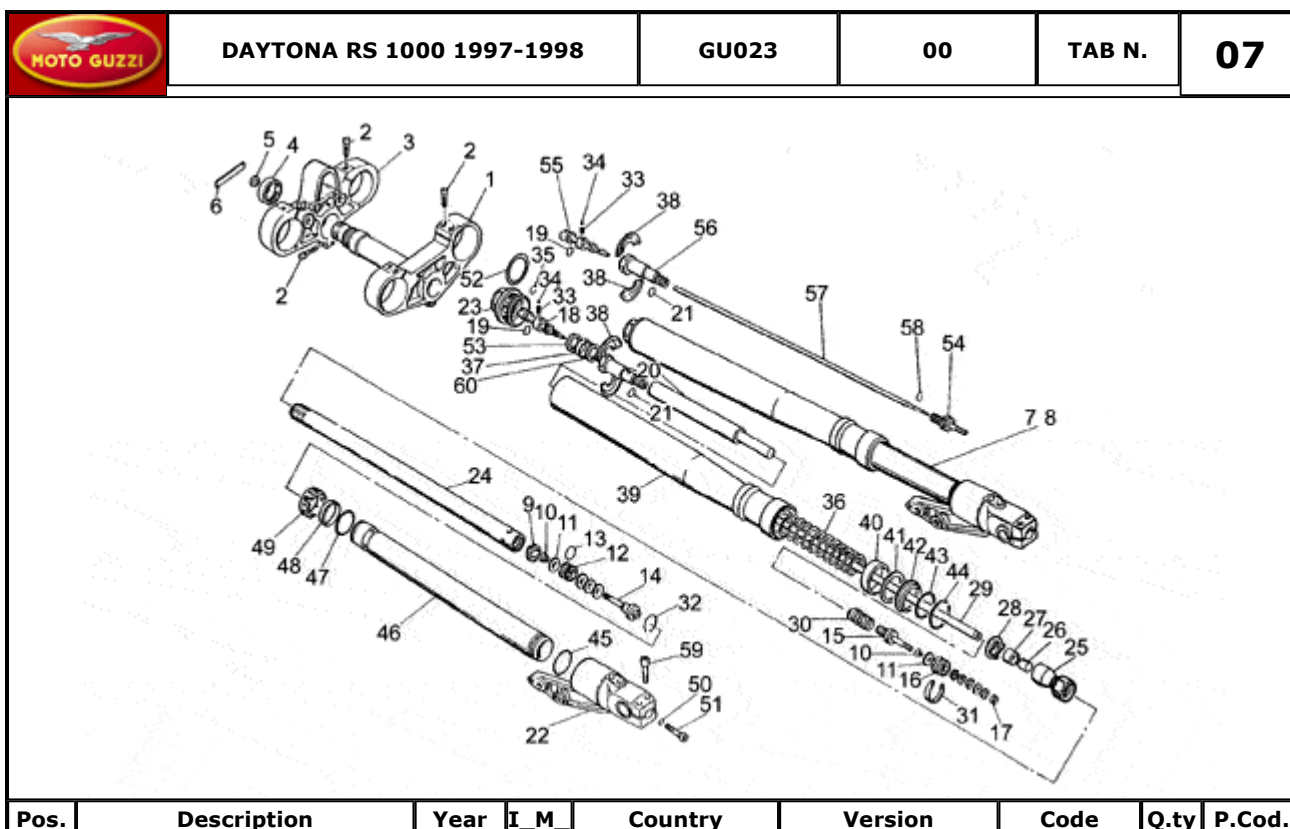

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Bottom plate, light colour	-	-	-	00898N	-	GU01494001	1
	Bottom plate, gunmetal grey	-	-	-	-	-	GU01494000	1
2	Screw M8X30	-	-	-	-	-	GU98622430	7
3	Top plate, gunmetal grey	-	-	-	-	-	GU01493100	1
	Top plate, light colour	-	-	-	00898N	-	GU01493101	1
4	Plug	-	-	-	-	-	GU30513400	1
5	Plug	-	-	-	-	-	GU23943410	1
6	Decal "Aquila"	-	-	-	-	-	GU01517700	1
7	RH hub cpl.	-	-	-	C	-	GU01490601	1
8	LH hub cpl.	-	-	-	E	-	GU01490701	1
9	Nut	-	-	-	-	-	GU01530510	2
10	Spring	-	-	-	-	-	GU01530511	4
11	Calibration blade	-	-	-	-	-	GU01530512	4
12	Piston	-	-	-	C	-	GU01530513	2
13	O-ring	-	-	-	-	-	GU01530514	2
14	Valve	-	-	-	C	-	GU01530515	2
15	Piston	-	-	-	E	-	GU01530516	1
16	Piston	-	-	-	E	-	GU01530517	2
17	Nut	-	-	-	-	-	GU01530518	2
18	RH needle rebound	-	-	-	C	-	GU01530519	1
19	O-ring	-	-	-	-	-	GU01530520	4
20	Adjuster unit	-	-	-	C	-	GU01530521	1
21	O-ring	-	-	-	-	-	GU01530522	2
22	RH wheel carrier	-	-	-	-	-	GU01530523	1
	LH wheel carrier	-	-	-	-	-	GU01530561	1
23	LH plug	-	-	-	E	-	GU01530562	1
	LH plug	-	-	-	C	-	GU01530524	1
24	Pipe	-	-	-	-	-	GU01530525	2
25	Hose	-	-	-	-	-	GU01530526	2
26	Bush	-	-	-	-	-	GU01530527	2
27	Drift	-	-	-	-	-	GU01530528	2
28	Stop ring	-	-	-	-	-	GU01530529	2
29	Rod	-	-	-	-	-	GU01530530	2

30	Spring	-	-	-	-	-	GU01530531	2
31	Ring	-	-	-	-	-	GU01530532	2
32	Stop ring	-	-	-	-	-	GU01530533	2
33	Spring	-	-	-	-	-	GU01530534	2
34	Ball	-	-	-	-	-	GU01530535	4
35	Safety washer	-	-	-	-	-	GU01530536	2
36	Spring	-	-	-	-	-	GU01530537	2
37	Spacer H=2,5mm	-	-	-	-	-	GU01530538	2
	Spacer H=5mm	-	-	-	-	-	GU01530539	2
38	Half ring	-	-	-	-	-	GU01530540	4
39	Sleeve	-	-	-	-	-	GU01530541	2
40	Bush	-	-	-	-	-	GU01530542	2
41	Ring	-	-	-	-	-	GU01530543	2
42	Gasket ring	-	-	-	-	-	GU01530544	2
43	Spacer	-	-	-	-	-	GU01530545	2
44	Stop ring	-	-	-	-	-	GU01530546	2
45	O-ring	-	-	-	-	-	GU01530547	2
46	Sleeve	-	-	-	-	-	GU01530548	2
47	Washer	-	-	-	-	-	GU01530549	2
48	Bush	-	-	-	-	-	GU01530550	2
49	Stop ring	-	-	-	-	-	GU01530551	2
50	Washer	-	-	-	-	-	GU01530552	2
51	Screw	-	-	-	-	-	GU01530553	2
52	O-ring	-	-	-	-	-	GU01530554	2
53	Ring	-	-	-	-	-	GU01530555	2
54	Support	-	-	-	C	-	GU01530556	1
55	Adjuster needle	-	-	-	E	-	GU01530557	1
56	Adjuster unit	-	-	-	E	-	GU01530558	1
57	Adjuster rod	-	-	-	E	-	GU01530559	1
58	O-ring	-	-	-	-	-	GU01530560	1
59	Screw	-	-	-	-	-	GU98623430	4
60	Washer	-	-	-	-	-	GU01530563	2


		DAYTONA RS 1000 1997-1998	GU023	00	TAB N.	08		
SWING ARM								
								
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Swing arm, black	-	-	-	-	GU01540200	1	
2	Ball bearing	-	-	-	-	GU92218418	2	
3	Pin	-	-	-	-	GU37547005	2	
4	Nut	-	-	-	-	GU30547800	2	
5	Rear shock absorber	-	-	-	-	GU01550200	1	
6	Top screw	-	-	-	-	GU98053670	1	
7	Washer 13x18x1,7	-	-	-	-	GU30217900	2	
8	Washer	-	-	-	-	GU95004213	1	
9	Nut	-	-	-	-	GU92630513	1	
10	Self-locking nut	-	-	-	-	GU92630512	1	
11	Lower screw	-	-	-	-	GU98610616	1	

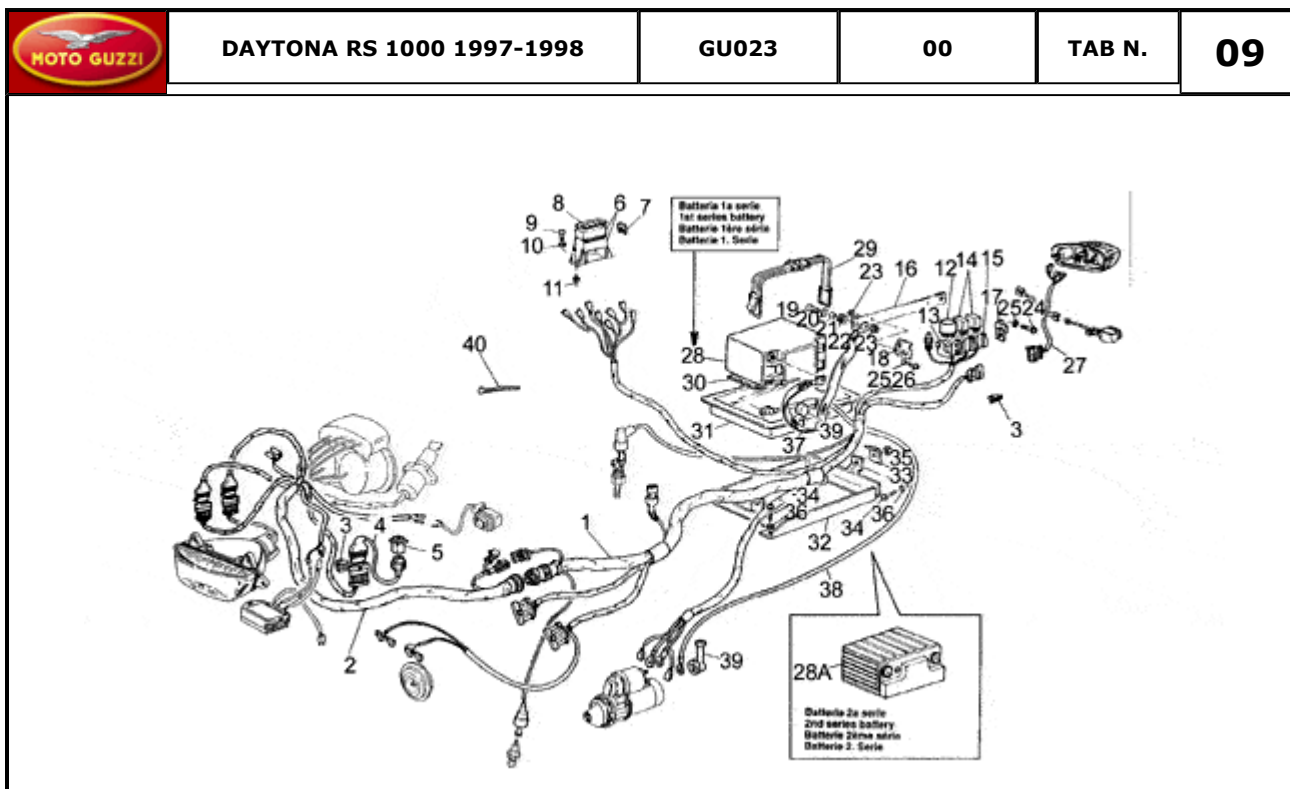


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Electrical system	-	-	-	-	GU01747100	1	
2	Dashboard cable	-	-	-	-	GU01747200	1	
3	Clip	-	-	-	-	GU30922260	2	
4	Emergency light wiring	-	-	-	-	GU01720100	1	
5	Turn indicator switch	-	-	-	-	GU28745761	1	
6	Fuse holder box	-	-	-	-	GU37743005	1	
7	Fuse 15A	-	-	-	-	GU28742560	6	
8	Sticker "schema fusibili"	-	-	-	-	GU01945000	1	
9	Hex socket screw M5X10	-	-	-	-	GU98622210	2	
10	Washer	-	-	-	-	GU95004205	2	
11	Antivibration bush	-	-	-	-	GU93231605	2	
12	Flasher unit	-	-	-	-	GU17750520	1	
13	Support	-	-	-	-	GU30756100	1	
14	Relay Siemens A302/B1008	-	-	-	-	GU30732560	2	
15	Relais support	-	-	-	-	GU30732400	2	
16	Relais support	-	-	-	-	GU37709905	1	
17	RH clamp	-	-	-	-	GU30477101	1	
18	LH plate	-	-	-	-	GU30477200	1	
19	Screw	-	-	-	-	GU98230622	1	
20	Washer 5,3x10x0,5	-	-	-	-	GU95100121	1	
21	Spacer	-	-	-	-	GU91180607	2	
22	Rubber spacer	-	-	-	-	GU91551085	2	
23	Nut M6x1	-	-	-	-	GU92630206	2	
24	Hex socket screw M6x18	-	-	-	-	GU98230619	1	
25	Washer 6,4x10x0,7	-	-	-	-	GU14217901	2	
26	Screw	-	-	-	-	GU98230612	1	
27	Taillight wiring harn.	-	-	-	-	GU01747300	1	
28	Battery 12V-12AH	-	-	-	1A	GU01704500	1	
	Battery 12V-13A	-	-	-	2A	GU01704501	1	
29	Battery fixing snap	-	-	-	-	GU01705500	1	
30	Drift	-	-	-	-	GU01706800	1	
31	Battery holder	-	-	-	-	GU01707000	1	
32	Battery holder	-	-	-	-	GU37418205	1	

33	Plate	-	-	-	-	-	GU37419405	1
34	Screw	-	-	-	-	-	GU98230612	3
35	Nut M6x1	-	-	-	-	-	GU92630106	1
36	Washer 6,4x10x0,7	-	-	-	-	-	GU14217901	3
37	Ground-battery lead	-	-	-	-	-	GU28747960	1
38	Wire	-	-	-	-	-	GU30748400	1
39	Cap	-	-	-	-	-	GU19707100	2
40	Hose clamp 3,6x375	-	-	-	-	-	GU93304390	1
	Hose clamp 3,6x20,6	-	-	-	-	-	GU14609650	1

	<b>DAYTONA RS 1000 1997-1998</b>	<b>GU023</b>	<b>00</b>	<b>TAB N.</b>	<b>10</b>
---	----------------------------------	--------------	-----------	---------------	-----------

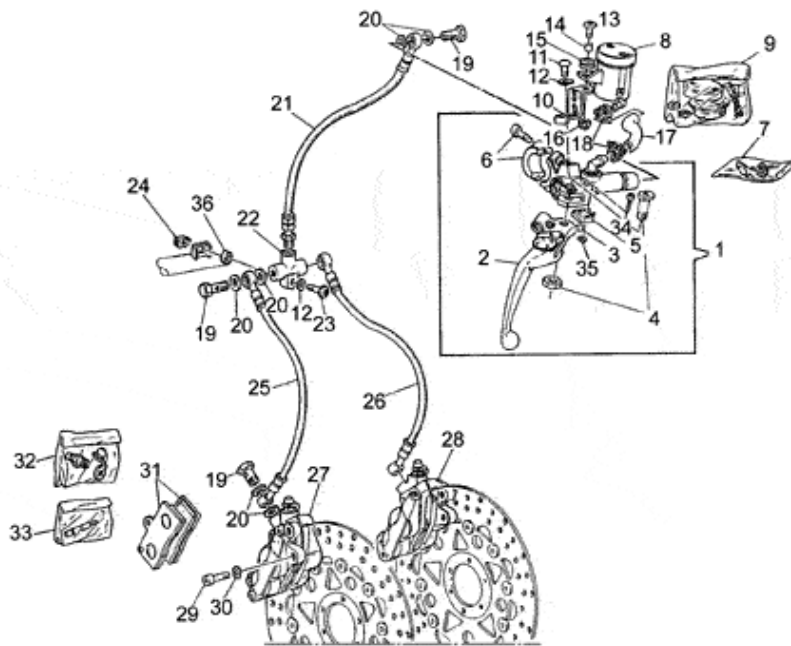


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Front master cilinder	-	-	-	-	GU37660105	1	
2	Front brake lever	-	-	-	-	GU37605605	1	
3	Ball	-	-	-	-	GU92295708	1	
4	Pin	-	-	-	-	GU27604815	1	
5	Microswitch	-	-	-	-	GU30749860	1	
6	U-bolt	-	-	-	-	GU30664000	1	
7	Pump connection overhaul unit	-	-	-	-	GU19659500	1	
8	Brake oil tank	-	-	-	-	GU30665000	1	
9	Tank cover	-	-	-	-	GU30661100	1	
10	Tank support bracket	-	-	-	g.ghi	GU30661445	1	
11	Screw	-	-	-	-	GU98230612	1	
12	Special washer	-	-	-	-	GU61013800	2	
13	Screw	-	-	-	-	GU98230616	1	
14	Spacer	-	-	-	-	GU91180607	1	
15	Rubber spacer	-	-	-	-	GU91551085	1	
16	Nut M6x1	-	-	-	-	GU92630206	1	
17	Rear brake hose	-	-	-	-	GU00823950050	1	
18	Hose clamp	-	-	-	-	GU19157800	2	
19	Oil pipe screw *	-	-	-	-	GU95990028	5	
20	Gasket	-	-	-	-	GU25656100	10	
21	Oil pipe	-	-	-	-	GU30657100	1	
22	Distributor	-	-	-	-	GU31656860	1	
23	Screw	-	-	-	-	GU98230635	1	
24	Captive nut	-	-	-	-	GU92660601	1	
25	RH front oil pipe	-	-	-	-	GU30658800	1	
26	LH front oil pipe	-	-	-	-	GU30658801	1	
27	RH Front brake caliper, gold	-	-	-	-	GU30652302	1	
28	LH Front brake caliper, gold	-	-	-	-	GU30652202	1	
29	Screw	-	-	-	-	GU98602525	4	
30	Washer 10,5x16x1	-	-	-	-	GU19149800	4	
31	Pads pair	-	-	-	-	GU30654602	2	
32	Bleeder+cap	-	-	-	-	GU30659200	2	
33	Pads kit	-	-	-	-	GU30659102	2	
34	Screw	-	-	-	-	GU98200214	2	
35	Nut	-	-	-	-	GU92601002	2	
36	Spacer	-	-	-	-	GU91180710	1	

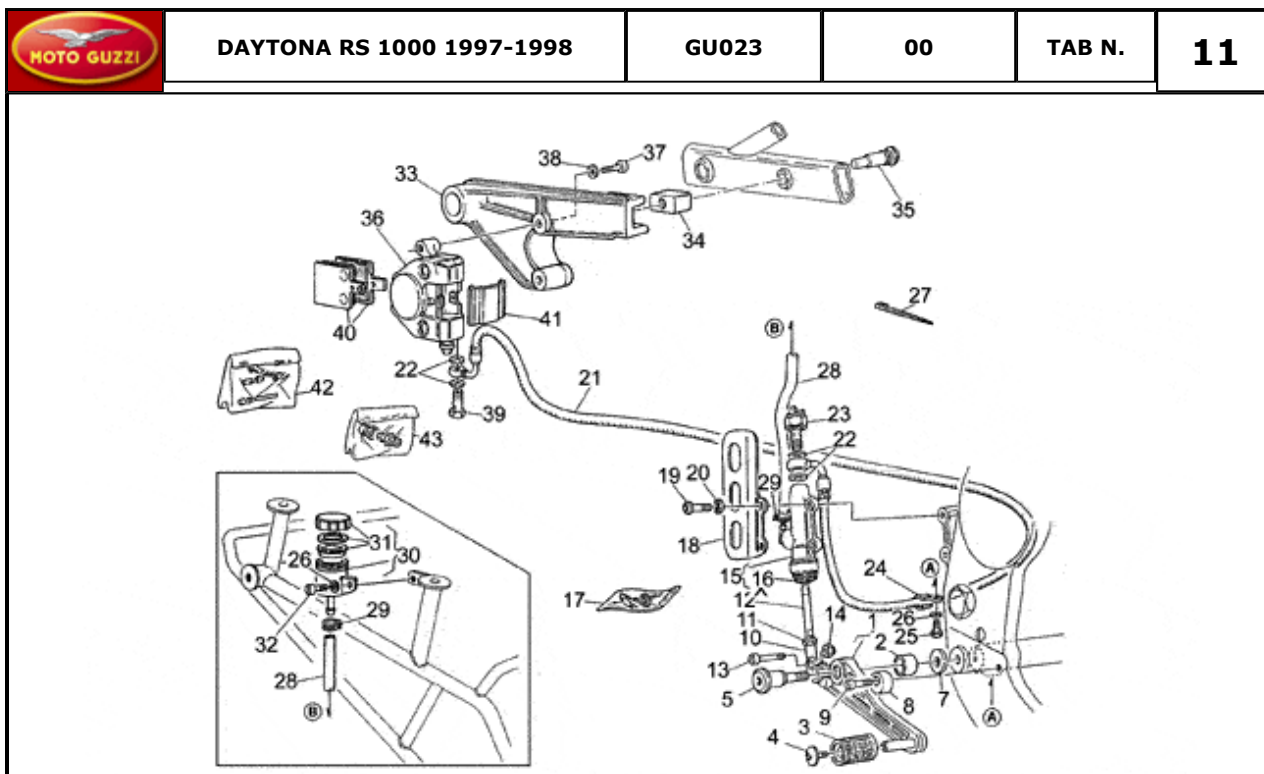


Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Brake lever	-	-	-	-	g.ghi GU30677045	1	
2	Bush	-	-	-	-	GU37678105	1	
3	Rubber spacer	-	-	-	-	GU14251001	1	
4	Screw	-	-	-	-	GU98230616	1	
5	Pin	-	-	-	-	GU37676605	1	
7	Washer	-	-	-	-	GU95100342	1	
8	Cam	-	-	-	-	GU30677600	1	
9	Hex socket screw M6X25	-	-	-	-	GU98622325	1	
10	Ball joint	-	-	-	-	GU30675300	1	
11	Nut	-	-	-	-	GU92602206	1	
12	Master cylinder rod	-	-	-	-	GU01675200	1	
13	Screw	-	-	-	-	GU98622320	1	
14	Nut M6x1	-	-	-	-	GU92630206	1	
15	Rear master cylinder	-	-	-	-	GU30666900	1	
16	Protection collar	-	-	-	-	GU30530525	1	
17	Pump connection overhaul unit	-	-	-	-	GU19659500	1	
18	Brake master cyl.protection	-	-	-	-	g.ghi GU30665445	1	
19	Screw	-	-	-	-	GU98230620	2	
20	Washer 6,4x10x0,7	-	-	-	-	GU14217901	2	
21	Rear brake hose	-	-	-	-	GU02657500	1	
22	Gasket	-	-	-	-	GU25656100	4	
23	Brake light switch	-	-	-	-	GU14657050	1	
24	Hose clamp	-	-	-	-	GU19718000	1	
25	Screw	-	-	-	-	GU98054310	1	
26	Washer 6,15x11x0,8	-	-	-	-	GU95004206	2	
27	Hose clamp 2,4x92	-	-	-	-	GU49609601	3	
28	Rear brake hose	-	-	-	-	GU00823950050	1	
29	Hose clamp	-	-	-	-	GU19157800	2	
30	Brake oil tank complete	-	-	-	-	GU30663500	1	
31	Tank cover	-	-	-	-	GU30661101	1	
32	Hex socket screw M6x16	-	-	-	-	GU98612316	1	
33	Brake hanger plate	-	-	-	-	GU01635800	1	
34	Block	-	-	-	-	GU37636105	1	
35	Special screw	-	-	-	-	GU37638605	1	




36	Rear brake caliper, gold	-	-	-	-	-	GU30653001	1
37	Screw	-	-	-	-	-	GU98602430	2
38	Washer 8,4X13X0,8	-	-	-	-	-	GU14615901	2
39	Oil pipe screw *	-	-	-	-	-	GU95990028	1
40	Pads pair BREMBO	-	-	-	-	-	GU27654610	1
41	Brake caliper cover	-	-	-	-	-	GU30654700	1
42	Pin+Brake spring	-	-	-	-	-	GU30659101	1
43	Bleeder+cap BREMBO D.10	-	-	-	-	-	GU31659260	1

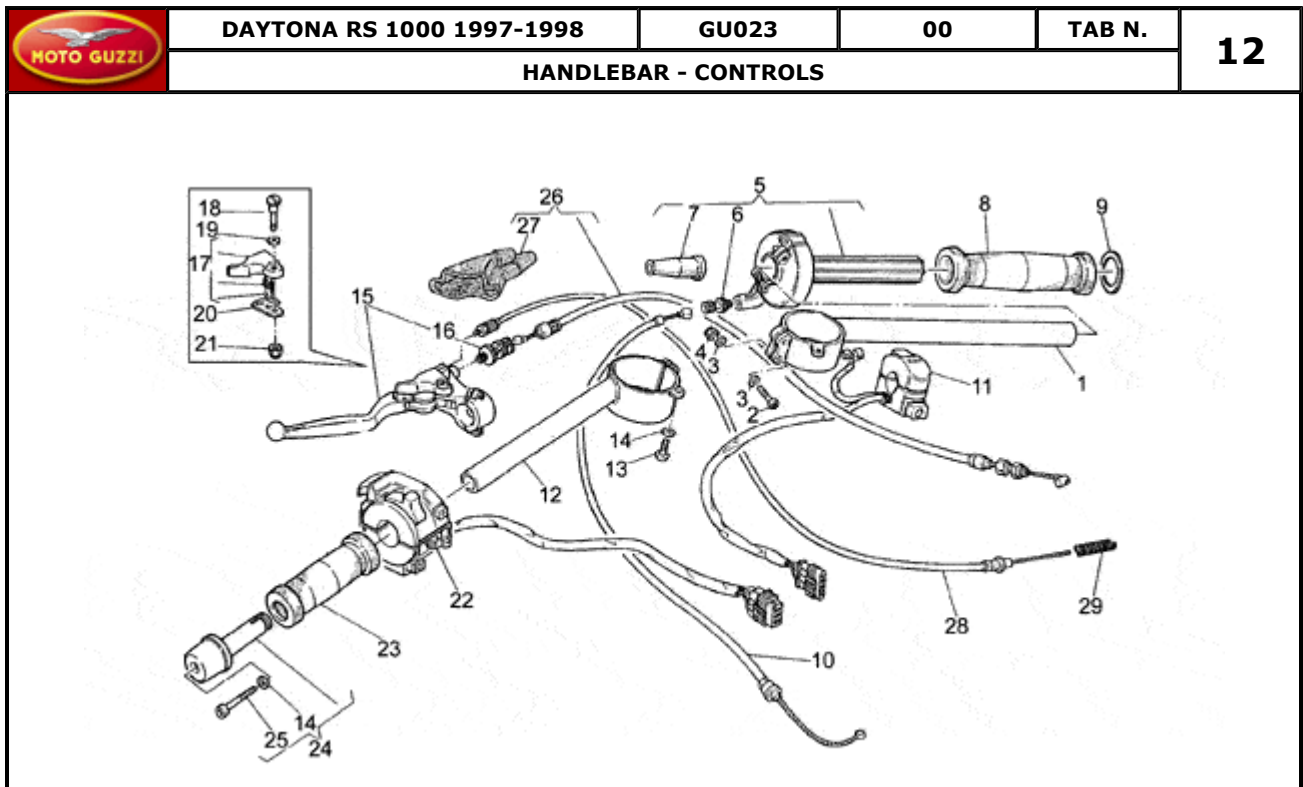


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Right half handlebar	-	-	-	-	GU01600600	1	
2	Hex socket screw M6x18	-	-	-	-	GU98610335	4	
3	Washer	-	-	-	-	GU95001206	8	
4	Nut M6x1	-	-	-	-	GU92630206	4	
5	Throttle w/out hand grip	-	-	-	-	GU01603400	1	
	Throttle	-	-	CH	-	GU01603404	1	
6	Adjuster screw	-	-	-	-	GU27603715	1	
7	Cap	-	-	-	-	GU27117615	1	
8	RH hand grip	-	-	-	-	GU27603520	1	
9	Nylon washer	-	-	-	-	GU29606970	1	
10	Throttle cable	-	-	-	-	GU01117500	1	
	Throttle cable	-	-	CH	-	GU01117504	1	
11	Engine stop-start device	-	-	-	-	GU01738800	1	
12	Left half handlebar	-	-	-	-	GU01600700	1	
13	Screw	-	-	-	-	GU98230612	2	
14	Washer 6,4x10x0,7	-	-	-	-	GU14217901	4	
15	Clutch control complete	-	-	-	-	GU01605500	1	
16	Register	-	-	-	-	GU30602500	1	
17	Starter lever	-	-	-	-	GU27135215	1	
18	Lever pin	-	-	-	-	GU27604315	1	
19	Washer	-	-	-	-	GU27530594	1	
20	Plate	-	-	-	-	GU27530595	1	
21	Nut M6x1	-	-	-	-	GU92630106	1	
22	LH lights sel. w/wiring	-	-	-	-	GU01738000	1	
	LH lights sel. w/wiring	-	-	AUS-J-NZ-SGP-USA	-	GU01738020	1	
23	LH hand grip	-	-	-	-	GU27603020	1	
24	H.bars anti.v weight	-	-	-	-	GU37602705	2	
25	Screw	-	-	-	-	GU98620375	2	
26	Clutch cable	-	-	-	-	GU01093000	1	
27	Protection	-	-	-	-	GU27663815	1	
28	Choke cable	-	-	-	-	GU01132800	1	
29	Return spring 7x1,1x25	-	-	-	-	GU94321073	1	

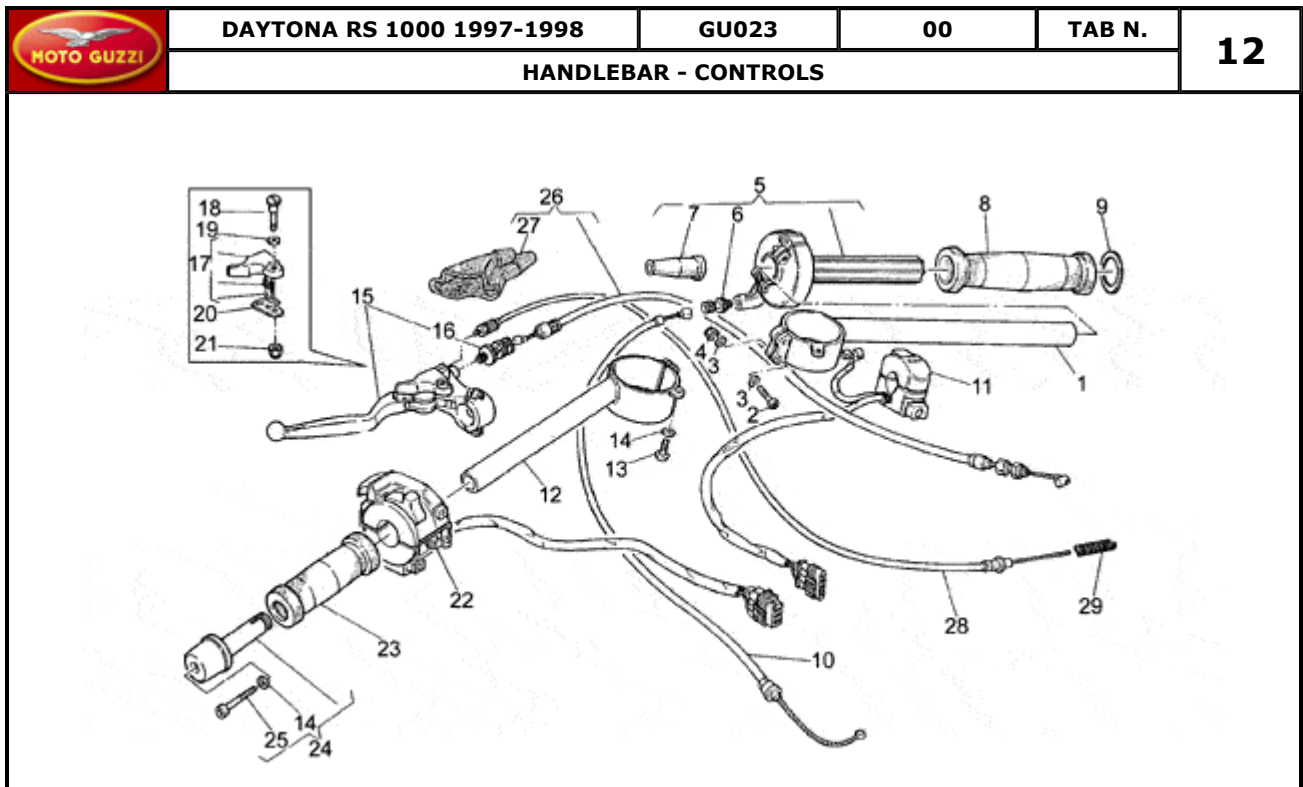

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Right half handlebar	-	-	-	-	GU01600600	1	
2	Hex socket screw M6x18	-	-	-	-	GU98610335	4	
3	Washer	-	-	-	-	GU95001206	8	
4	Nut M6x1	-	-	-	-	GU92630206	4	
5	Throttle w/out hand grip	-	-	-	-	GU01603400	1	
	Throttle	-	-	CH	-	GU01603404	1	
6	Adjuster screw	-	-	-	-	GU27603715	1	
7	Cap	-	-	-	-	GU27117615	1	
8	RH hand grip	-	-	-	-	GU27603520	1	
9	Nylon washer	-	-	-	-	GU29606970	1	
10	Throttle cable	-	-	-	-	GU01117500	1	
	Throttle cable	-	-	CH	-	GU01117504	1	
11	Engine stop-start device	-	-	-	-	GU01738800	1	
12	Left half handlebar	-	-	-	-	GU01600700	1	
13	Screw	-	-	-	-	GU98230612	2	
14	Washer 6,4x10x0,7	-	-	-	-	GU14217901	4	
15	Clutch control complete	-	-	-	-	GU01605500	1	
16	Register	-	-	-	-	GU30602500	1	
17	Starter lever	-	-	-	-	GU27135215	1	
18	Lever pin	-	-	-	-	GU27604315	1	
19	Washer	-	-	-	-	GU27530594	1	
20	Plate	-	-	-	-	GU27530595	1	
21	Nut M6x1	-	-	-	-	GU92630106	1	
22	LH lights sel. w/wiring	-	-	-	-	GU01738000	1	
	LH lights sel. w/wiring	-	-	AUS-J-NZ-SGP-USA	-	GU01738020	1	
23	LH hand grip	-	-	-	-	GU27603020	1	
24	H.bars anti.v weight	-	-	-	-	GU37602705	2	
25	Screw	-	-	-	-	GU98620375	2	
26	Clutch cable	-	-	-	-	GU01093000	1	
27	Protection	-	-	-	-	GU27663815	1	
28	Choke cable	-	-	-	-	GU01132800	1	
29	Return spring 7x1,1x25	-	-	-	-	GU94321073	1	

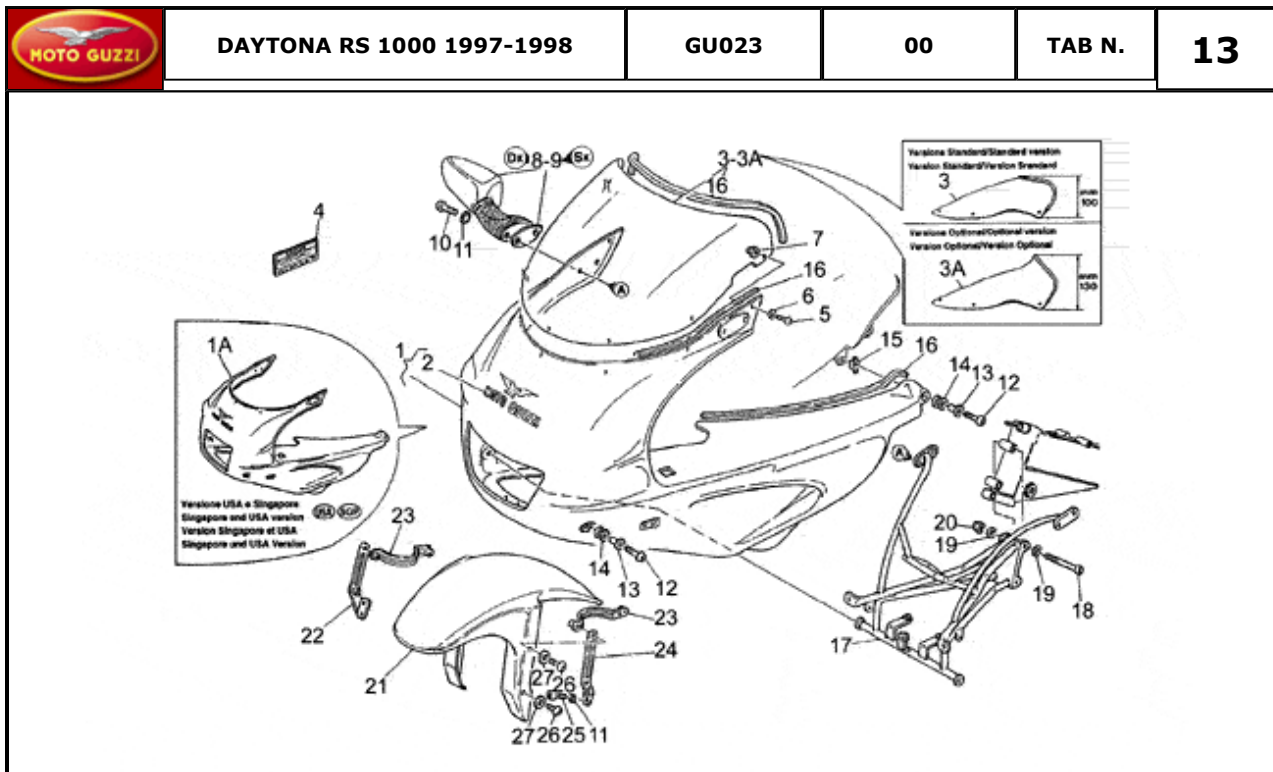


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Naked fairing	-	-	-	-	r.guz	GU01575451	1
	Naked fairing	-	-	SGP-USA	-	gr	GU01575455	1
	Naked fairing	-	-	SGP-USA	-	r.guz	GU01575456	1
	Naked fairing	-	-	-	-	gr	GU01575450	1
2	"MotoGuzzi" decal,silver/black	-	-	-	-	-	GU01917500	1
3	Windscreen	-	-	-	std	-	GU37577205	1
	Windscreen	-	-	-	OP	-	GU37577206	1
4	Decal "Attention"	-	-	SGP-USA	-	-	GU30944400	1
5	Screw	-	-	-	-	-	GU98230515	6
6	Nylon washer 5,5X12X1	-	-	-	-	-	GU30577800	6
7	Nut	-	-	-	-	-	GU92630205	6
8	RH rearview mirror	-	-	-	-	-	GU30769400	1
9	LH rearview mirror	-	-	-	-	-	GU30769800	1
10	Screw	-	-	-	-	-	GU98230620	4
11	Washer 6,4x10x0,7	-	-	-	-	-	GU14217901	4
12	Screw	-	-	-	-	-	GU98230622	4
13	Spacer D.6,5	-	-	-	-	-	GU30576100	4
14	Rubber spacer	-	-	-	-	-	GU91551010	4
15	Captive nut	-	-	-	-	-	GU92660601	2
16	Gasket PVC	-	-	-	-	-	GU00823931080	1
17	Instrum.holder frame	-	-	-	FT	-	GU01590500	1
	Instrum.holder frame	-	-	SGP-USA	FC	-	GU01590520	1
18	Screw	-	-	-	-	-	GU98610360	2
19	Washer	-	-	-	-	-	GU95000206	4
20	Nut M6x1	-	-	-	-	-	GU92630206	2
21	Front mudguard	-	-	-	-	r.guz	GU01434450	1
	Front mudguard blank	-	-	-	-	gr	GU01434401	1
22	RH front mudguard supp.	-	-	-	-	-	GU01435700	1
23	Front mudguard support	-	-	-	-	-	GU01434800	2
24	LH front mudguard supp.	-	-	-	-	-	GU01435900	1
25	Screw	-	-	-	-	-	GU98622314	6
26	Screw	-	-	-	-	-	GU98230622	4
27	Washer	-	-	-	-	-	GU29577860	4

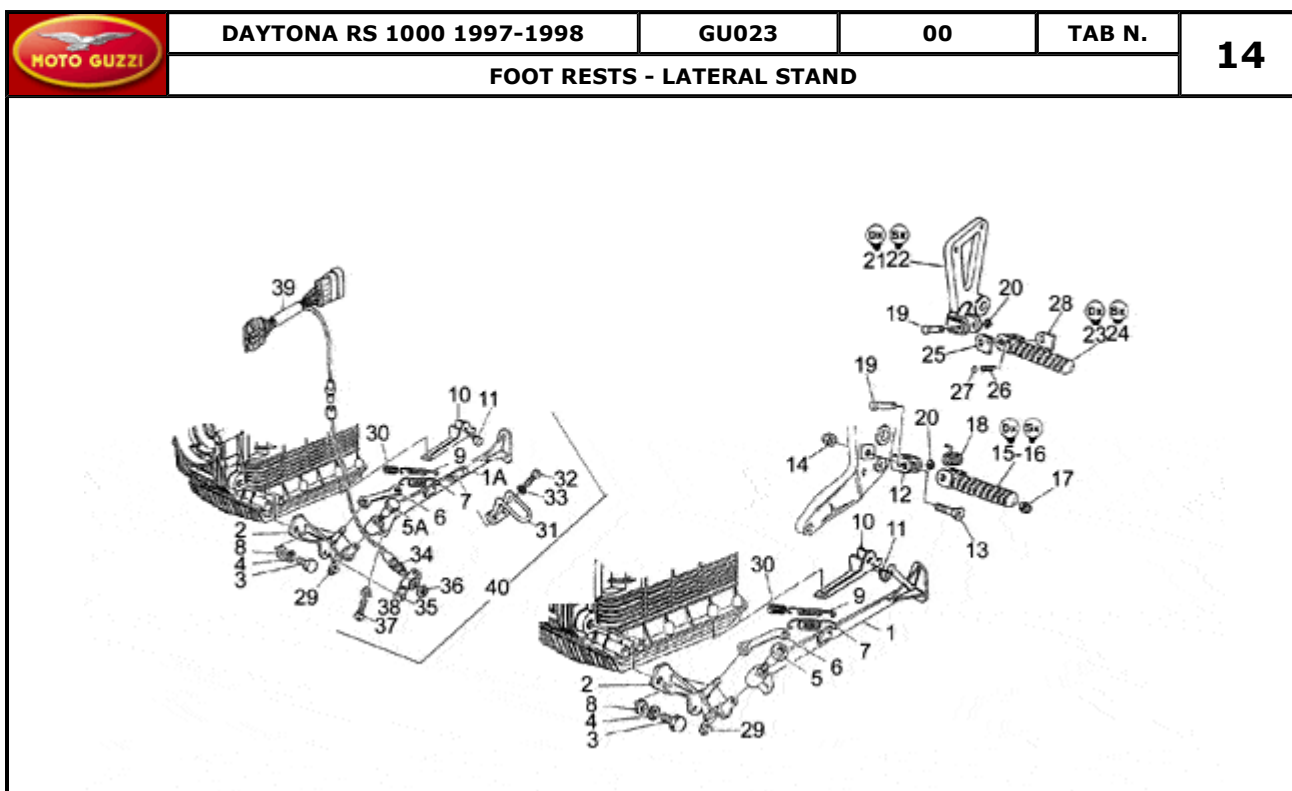


Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Lateral stand	-	-	-	1A	GU30432100	1	
	Lateral stand	-	-	-	00798N-2A	GU02432100	1	
2	Plate	-	-	-	-	GU01433400	1	
3	Screw	-	-	-	-	GU30432801	1	
4	Special washer	-	-	-	-	GU95021114	1	
5	Screw	-	-	-	1A	GU01433200	1	
	Screw	-	-	-	00798N-2A	GU01433201	1	
6	Plate	-	-	-	-	GU30432700	1	
7	Outer spring	-	-	-	-	GU30434001	1	
8	Washer	-	-	-	-	GU95100521	1	
9	Inner spring	-	-	-	-	GU30434000	1	
10	Plate	-	-	-	-	GU01433600	1	
11	Drift	-	-	-	-	GU93180575	1	
12	Support	-	-	-	-	g.ghi GU30442705	2	
13	Screw	-	-	-	-	GU98251040	2	
14	Nut M10X1,5	-	-	-	-	GU92630110	2	
15	RH Foot rests	-	-	-	-	GU30440705	1	
16	LH Foot rests	-	-	-	-	GU30441805	1	
17	Pin	-	-	-	-	GU30441005	2	
18	Return spring	-	-	-	-	GU30441105	2	
19	Pin	-	-	-	-	GU30442205	4	
20	Stop ring	-	-	-	-	GU90280006	4	
21	RH footrest support	-	-	-	-	g.ghi GU01444650	1	
22	LH footrest support	-	-	-	-	g.ghi GU01444750	1	
23	Rear footrest, RH	-	-	-	-	GU30442405	1	
24	Rear footrest, LH	-	-	-	-	GU30442805	1	
25	Footrest plate	-	-	-	-	GU30443105	2	
26	Spring	-	-	-	-	GU94321062	2	
27	Ball	-	-	-	-	GU92295706	2	
28	Plate	-	-	-	-	GU30441605	2	
29	Flanged nut	-	-	-	-	GU92660310	1	
30	Pipe	-	-	-	-	GU30433800	1	

31	Lever	-	-	-	00798N-2A	-	GU02431900	1
32	Screw	-	-	-	00798N-2A	-	GU98230615	2
33	Washer 6,4x10x0,7	-	-	-	00798N-2A	-	GU14217901	2
34	Lateral stand switch	-	-	-	00798N-2A	-	GU03759100	1
35	Plate	-	-	-	00798N-2A	-	GU02433800	1
36	Nut M8X1	-	-	-	00798N-2A	-	GU92602508	1
37	Screw	-	-	-	00798N-2A	-	GU97040220	1
38	Nut	-	-	-	00798N-2A	-	GU92602205	1
39	Stand switch wiring	-	-	-	00798N-2A	-	GU02736200	1
40	Stand cpl.	-	-	-	00798N-2A	-	GU02979201	1

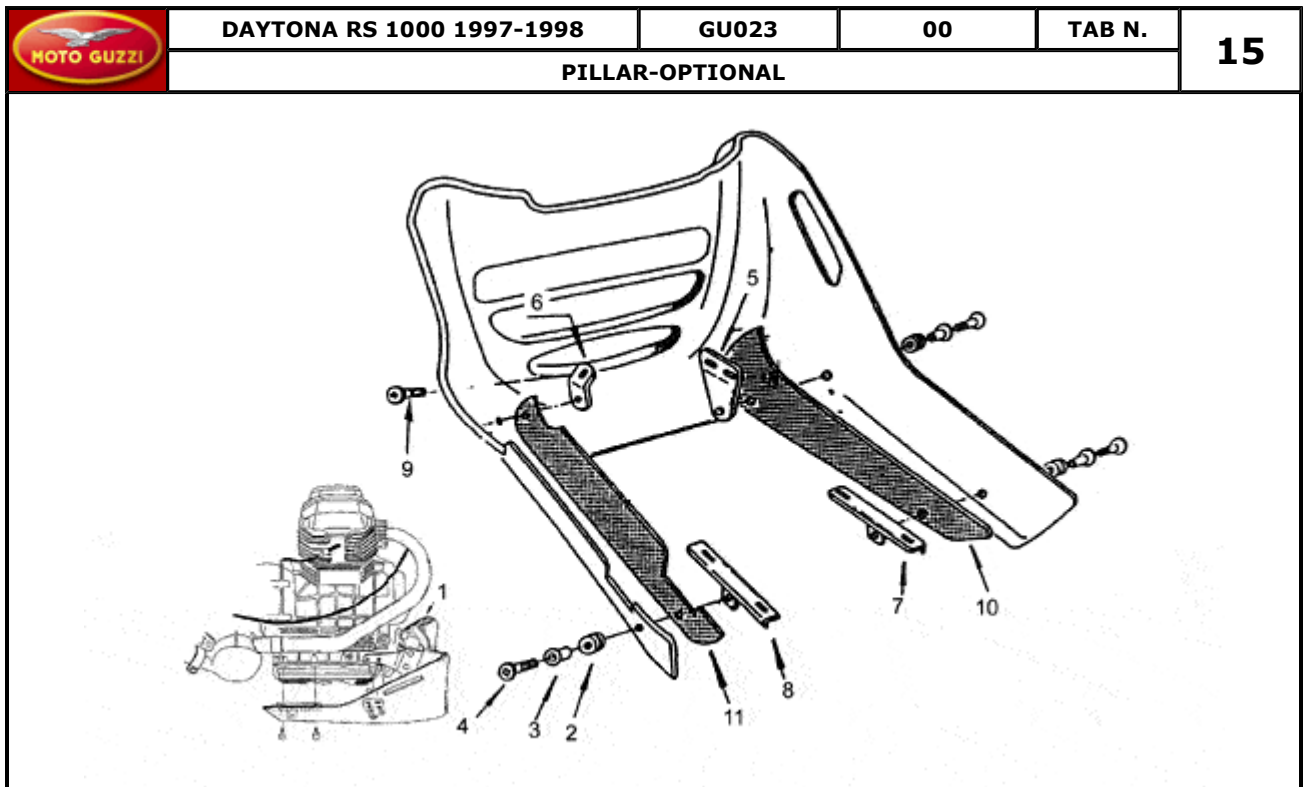


Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Water cooler protection assy.	-	-	-	-	gr	GU02977710	1
2	Rubber spacer	-	-	-	-	-	GU91551010	4
3	Spacer D.6,5	-	-	-	-	-	GU30576100	4
4	Screw M6X20	-	-	-	-	-	GU98230621	4
5	RH front plate	-	-	-	-	-	GU02571910	1
6	LH front plate	-	-	-	-	-	GU02572010	1
7	RH rear plate	-	-	-	-	-	GU02574210	1
8	LH rear plate	-	-	-	-	-	GU02574310	1
9	Screw 6X25	-	-	-	-	-	GU98230626	1
10	RH heat protection	-	-	-	-	-	GU02572710	1
11	LH heat protection	-	-	-	-	-	GU02572810	1

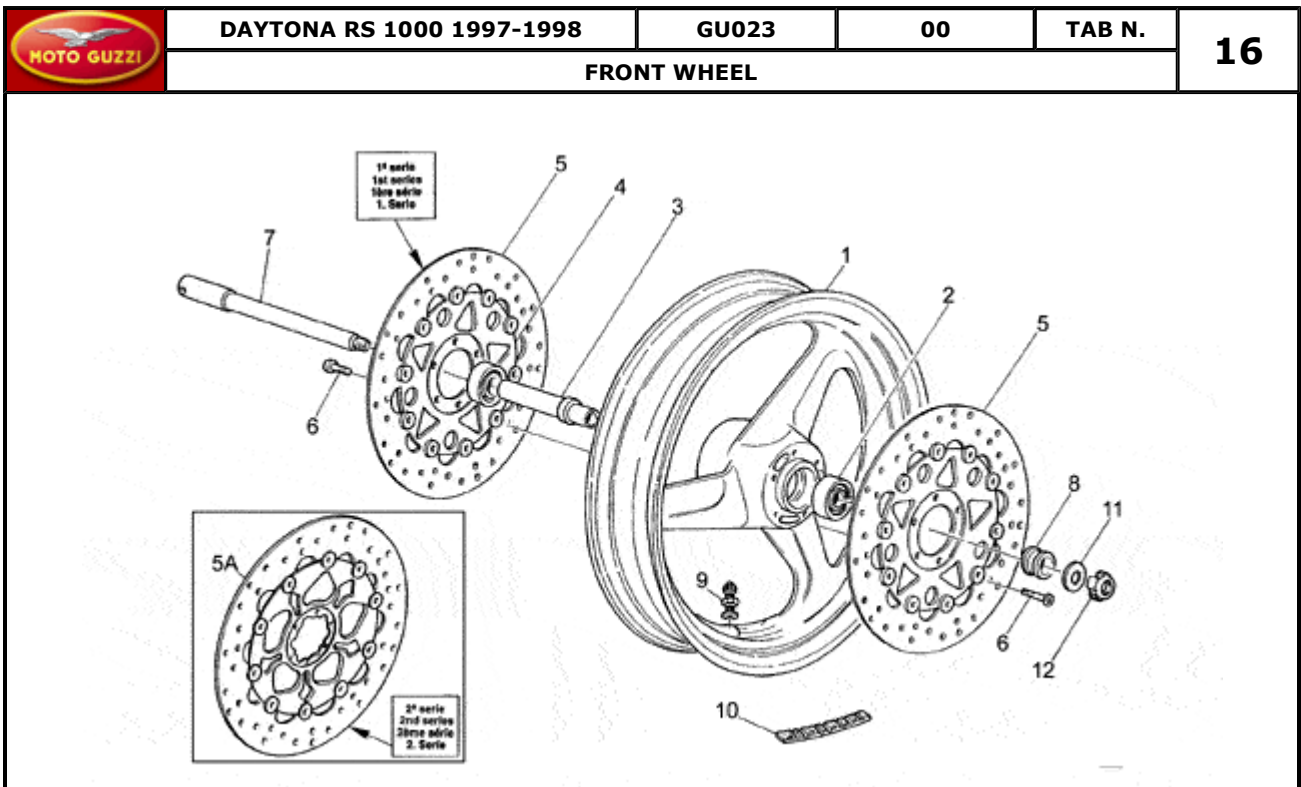


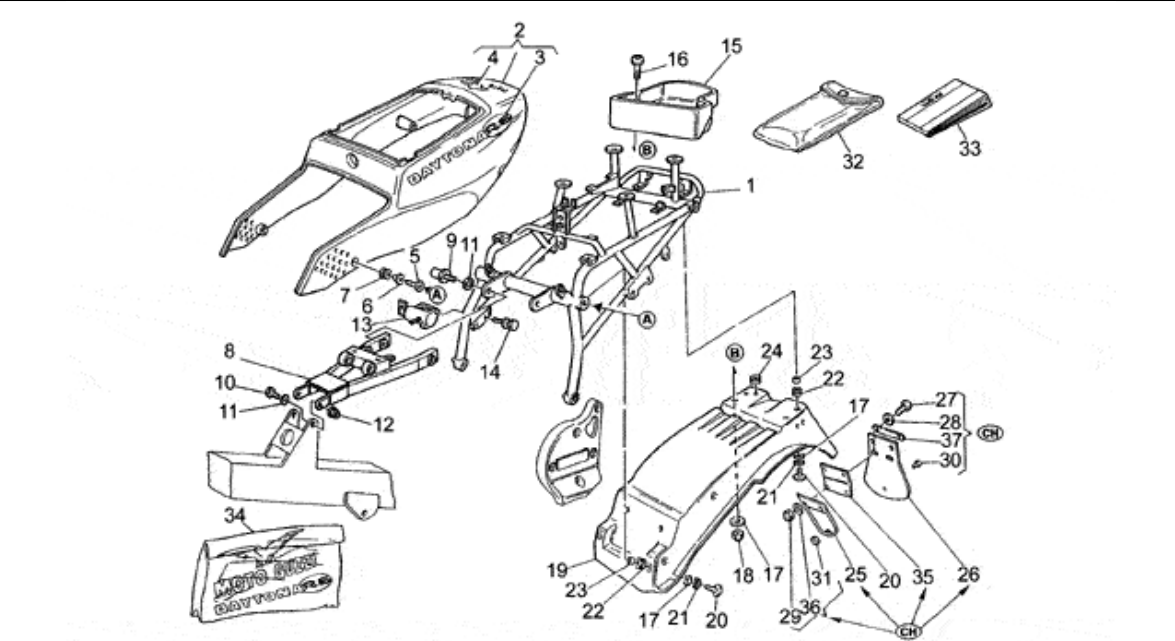



Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Front wheel	-	-	-	-	g GU01610300	1	
2	Ball bearing 25x52x15	-	-	-	-	GU92205227	1	
3	Bearing internal spacer	-	-	-	-	GU01615300	1	
4	Bearing 20x52x15	-	-	-	-	GU92201821	1	
5	Front brake disc	-	-	-	2A	GU01613351	2	
	Front brake disc	-	-	-	1A	GU01613350	2	
6	Hex socket screw M8x20	-	-	-	-	GU98230820	12	
7	Front wheel spindle	-	-	-	-	GU01614100	1	
8	Spacer	-	-	-	-	GU01616300	1	
9	Air valve	-	-	-	-	GU28617760	1	
10	Counterweight	-	-	-	-	GU14616150	1	
11	Washer	-	-	-	-	GU95004219	1	
12	Ring nut	-	-	-	-	GU93704160	1	

	DAYTONA RS 1000 1997-1998	GU023	00	TAB N.	<b>17</b>
	REAR WHEEL				

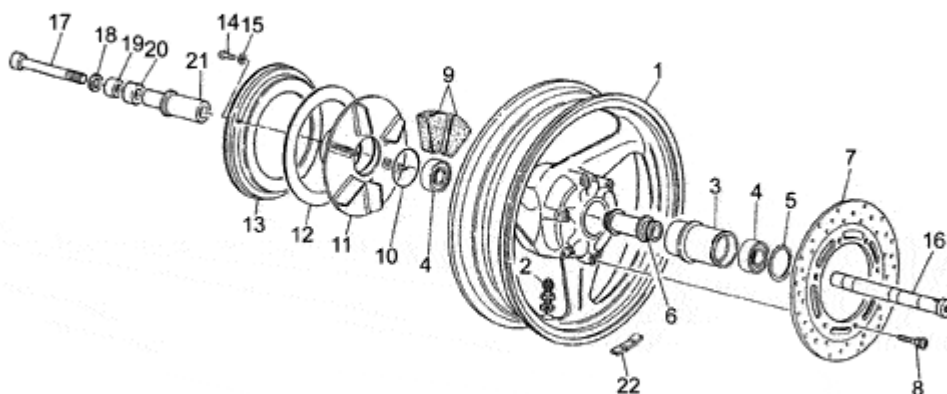
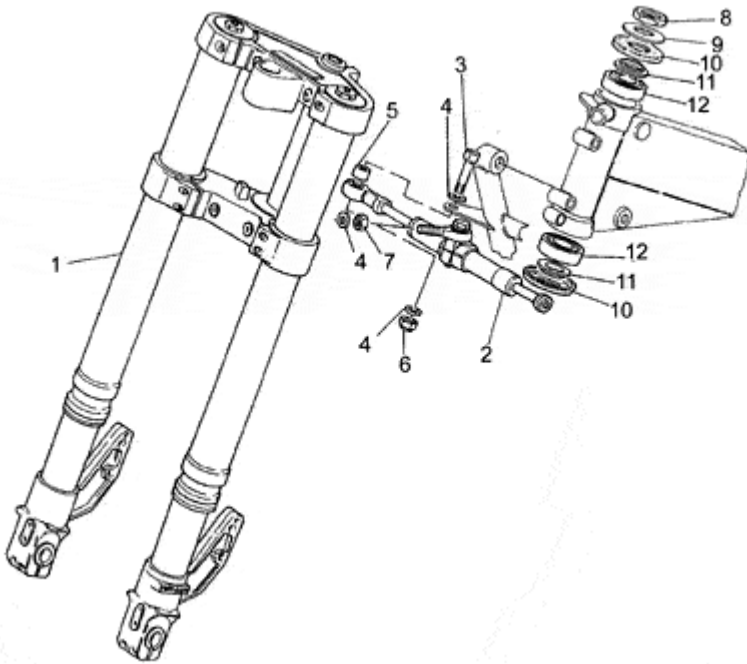



Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Rear wheel	-	-	-	-	g GU01630600	1	
2	Air valve	-	-	-	-	GU28617760	1	
3	Hub	-	-	-	-	GU01632200	1	
4	Ball bearing 20X47X14	-	-	-	-	GU92204220	2	
5	Circlip	-	-	-	-	GU90271055	1	
6	Spacer	-	-	-	-	GU01634000	1	
7	Rear brake disc, black	-	-	-	-	GU01635700	1	
8	Screw	-	-	-	-	GU30611460	6	
9	Rubber cush drive hub	-	-	-	-	GU01336800	12	
10	O-ring	-	-	-	-	GU90706490	1	
11	Flexible coupling disc	-	-	-	-	GU14335203	1	
12	Ring	-	-	-	-	GU14335350	1	
13	Flange	-	-	-	-	GU14335650	1	
14	Screw	-	-	-	-	GU98230620	6	
15	Special washer	-	-	-	-	GU61013800	6	
16	Rear wheel spindle	-	-	-	-	GU37633305	1	
17	Pin fixing screw	-	-	-	-	GU30632601	1	
18	Washer 13x18x1,7	-	-	-	-	GU30217900	1	
19	Bush	-	-	-	-	GU37634505	1	
20	Spacer	-	-	-	-	GU37634805	1	
21	RH inner spacer	-	-	-	-	GU37634105	1	
22	Counterweight	-	-	-	-	GU14616150	1	

		DAYTONA RS 1000 1997-1998	GU023	00	TAB N.	18		
SADDLE								
								
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Saddle support	-	-	-	-	n.l	GU01410200	1
2	Rear fairing	-	-	-	-	r.guz	GU01573150	1
	Rear tail blank	-	-	-	-	gr	GU375731051	1
3	"Daytona RS" decal silver/black	-	-	-	-	-	GU01923450	2
4	"MotoGuzzi" decal,silver/black	-	-	-	-	-	GU01917500	1
5	Screw	-	-	-	-	-	GU98230622	4
6	Spacer D.6,5	-	-	-	-	-	GU30576100	4
7	Rubber spacer	-	-	-	-	-	GU91551010	4
8	Connecting arm	-	-	-	-	-	GU01406200	1
9	Screw	-	-	-	-	-	GU37409005	2
10	Screw	-	-	-	-	-	GU98054525	2
11	Washer 10,2x18x2	-	-	-	-	-	GU95004210	4
12	Nut	-	-	-	-	-	GU92660210	2
13	Helmet lock	-	-	-	-	-	GU66466815	1
14	Shear rivet	-	-	-	-	-	GU66468115	2
15	Flange	-	-	-	-	-	GU37479605	1
16	Screw	-	-	-	-	n.l	GU98230616	2
17	Washer 6,4x12x1,2	-	-	-	-	-	GU95100141	8
18	Nut M6x1	-	-	-	-	-	GU92630106	2
19	Rear mudguard	-	-	-	-	-	GU37437005	1
20	Screw	-	-	-	-	-	GU98230616	4
21	Washer 6,4x10x0,7	-	-	-	-	-	GU14217901	4
22	Rubber spacer	-	-	-	-	-	GU91551082	4
23	Spacer	-	-	-	-	-	GU91180608	4
24	Rubber spacer	-	-	-	-	-	GU91551062	2
25	Splash guard support	-	-	CH	-	-	GU30438102	1
26	Rear splash guard	-	-	CH	-	-	GU30438032	1
27	Screw	-	-	CH	-	-	GU98230520	4
28	Washer	-	-	CH	-	-	GU95007205	2
29	Nut	-	-	CH	-	-	GU92630205	4
30	Pin	-	-	CH	-	-	GU23922210	1
31	Washer	-	-	CH	-	-	GU95100123	1
32	Toolkit	-	-	-	-	-	GU02909900	1
33	Operator's handbook I-GB-F-D	-	-	D-F-I-UK	-	-	GU01900000	1
34	Decal set	-	-	-	D1	-	GU01923350	1
35	Plate	-	-	CH	-	-	GU30437430	1
36	Washer	-	-	CH	-	-	GU95000205	2
37	Plate	-	-	CH	-	-	GU37439307	1

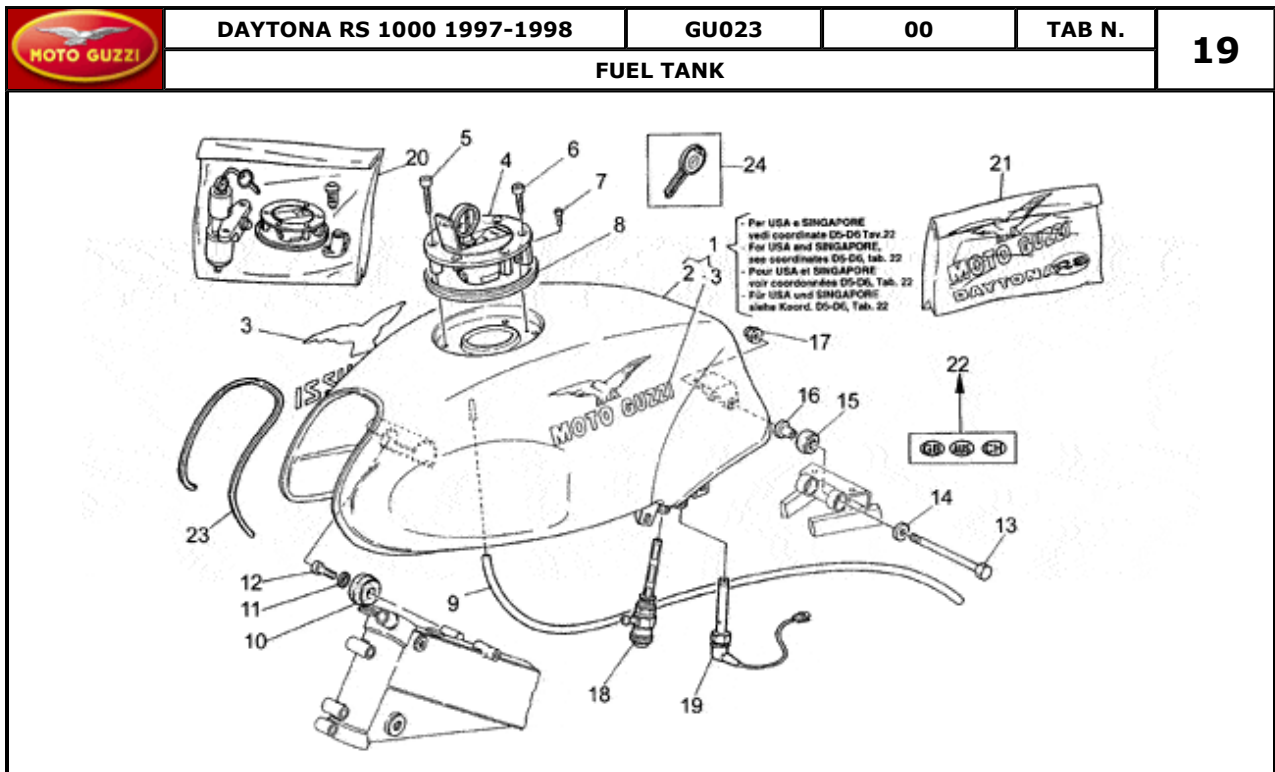


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Fuel tank red	-	-	-	-	r.guz	GU01100250	1
	Fuel tank	-	-	CH	-	gr	GU01100254	1
	Fuel tank	-	-	CH	-	r.guz	GU01100255	1
	Fuel tank	-	-	-	-	gr	GU01100200	1
2	"Moto Guzzi" LH decal	-	-	-	D1	-	GU01917900	1
3	"Moto Guzzi" RH decal	-	-	-	D1	-	GU01917800	1
4	Fuel filler cap	-	-	-	-	-	GU01103920	1
5	Screw M5X30	-	-	-	-	-	GU98620230	3
6	Hex socket screw M5X10	-	-	-	-	-	GU98622210	3
7	Screw	-	-	-	-	-	GU98622215	1
8	Gasket	-	-	-	-	-	GU01101700	1
9	Rubber pipe 5X9	-	-	-	-	-	GU00823944050	1
10	Rubber spacer	-	-	-	-	-	GU66103415	2
11	Washer 8,4X13X0,8	-	-	-	-	-	GU14615901	2
12	Screw	-	-	-	-	-	GU98622420	2
13	Screw	-	-	-	-	-	GU98052398	1
14	Washer	-	-	-	-	-	GU95000206	1
15	Rubber spacer	-	-	-	-	-	GU30107100	2
16	T bush	-	-	-	-	-	GU30103500	2
17	Nut M6x1	-	-	-	-	-	GU92630106	1
18	Fuel cock	-	-	-	-	-	GU29105460	1
19	Fuel level sensor	-	-	-	-	-	GU01103001	1
20	Lock hardware kit	-	-	-	-	-	GU01736820	1
21	Decal set	-	-	-	D1	-	GU01923350	1
22	Sticker	-	-	AUS-CH-UK	-	-	GU29995735	1
23	Gasket PVC	-	-	-	-	-	GU00823931080	1
24	Non indented key blank	-	-	-	-	-	GU30735500	1

		DAYTONA RS 1000 1997-1998	GU023	00	TAB N.	20		
STEERING								
								
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Front fork	-	-	-	-	GU01490200	1	
2	Steering shock absorber	-	-	-	-	GU30530201	1	
3	Screw M8X40	-	-	-	-	GU98620440	1	
4	Washer	-	-	-	-	GU95004208	3	
5	Spacer	-	-	-	-	GU91180810	1	
6	Nut	-	-	-	-	GU92630108	1	
7	Nut M8X1,25	-	-	-	-	GU92602208	1	
8	Nut	-	-	-	-	GU92700241	1	
9	Washer	-	-	-	-	GU30516500	1	
10	Dust cover	-	-	-	-	GU14517000	2	
11	Clearance washer	-	-	-	-	GU14516700	2	
12	Tap.roller bearing	-	-	-	-	GU92249225	2	

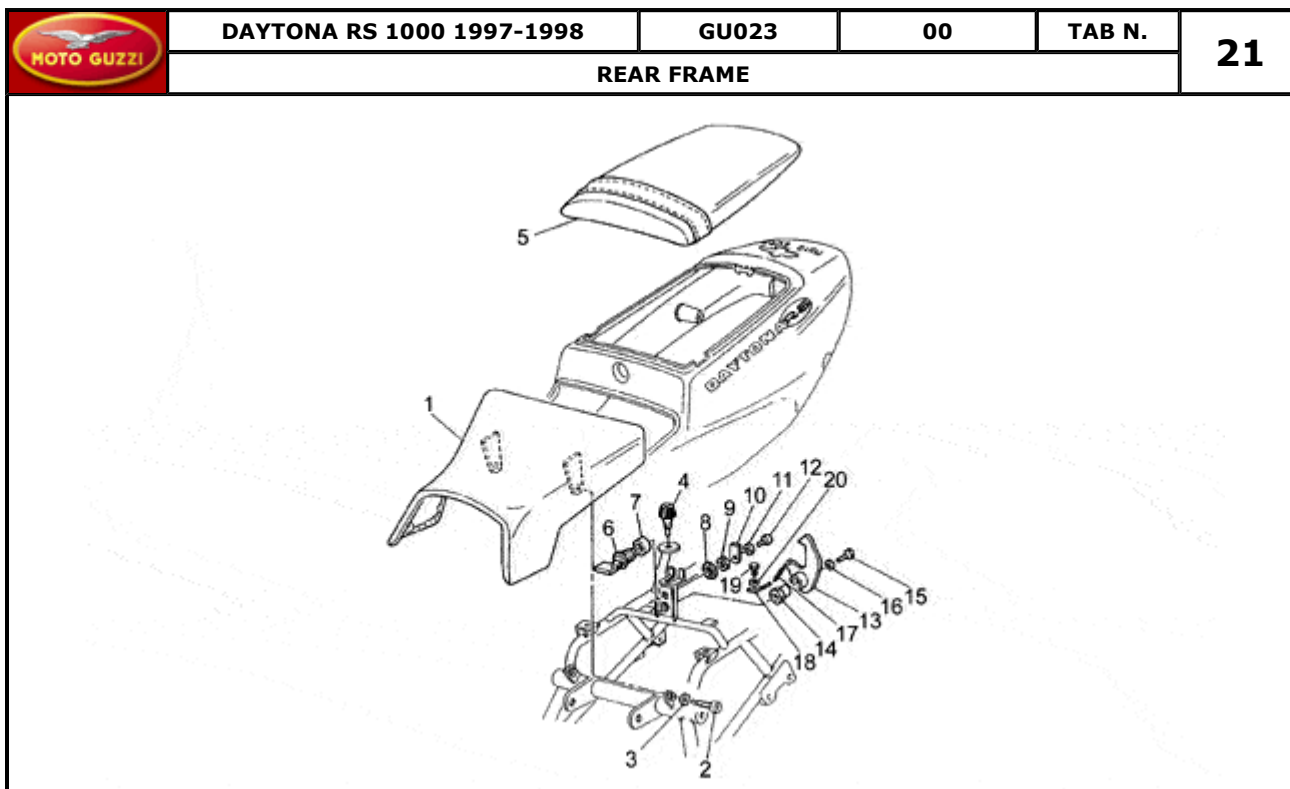


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Driver saddle	-	-	-	-	GU01460500	1	
2	Screw	-	-	-	-	GU37463205	2	
3	Washer	-	-	-	-	GU95004208	2	
4	Rubber spacer	-	-	-	-	GU19461650	8	
5	Rear saddle	-	-	-	-	GU01464000	1	
6	Box lock	-	-	-	-	GU30468700	1	
7	Spacer	-	-	-	-	GU37464405	1	
8	Ring nut	-	-	-	-	GU95021019	1	
9	Nut	-	-	-	-	GU92608618	1	
10	Lock lever	-	-	-	-	GU37466705	1	
11	Washer	-	-	-	-	GU95000206	1	
12	Screw	-	-	-	-	GU98230610	1	
13	Hook	-	-	-	-	GU37465005	1	
14	Bush	-	-	-	-	GU37465305	1	
15	Hex screw M8x30	-	-	-	-	GU98052430	1	
16	Washer 8,4x15x1,8	-	-	-	-	GU95100253	1	
17	Spring	-	-	-	-	GU17667651	1	
18	Support	-	-	-	-	GU37462505	1	
19	Screw	-	-	-	-	GU98054314	1	
20	Washer 6,4x10x0,7	-	-	-	-	GU14217901	1	

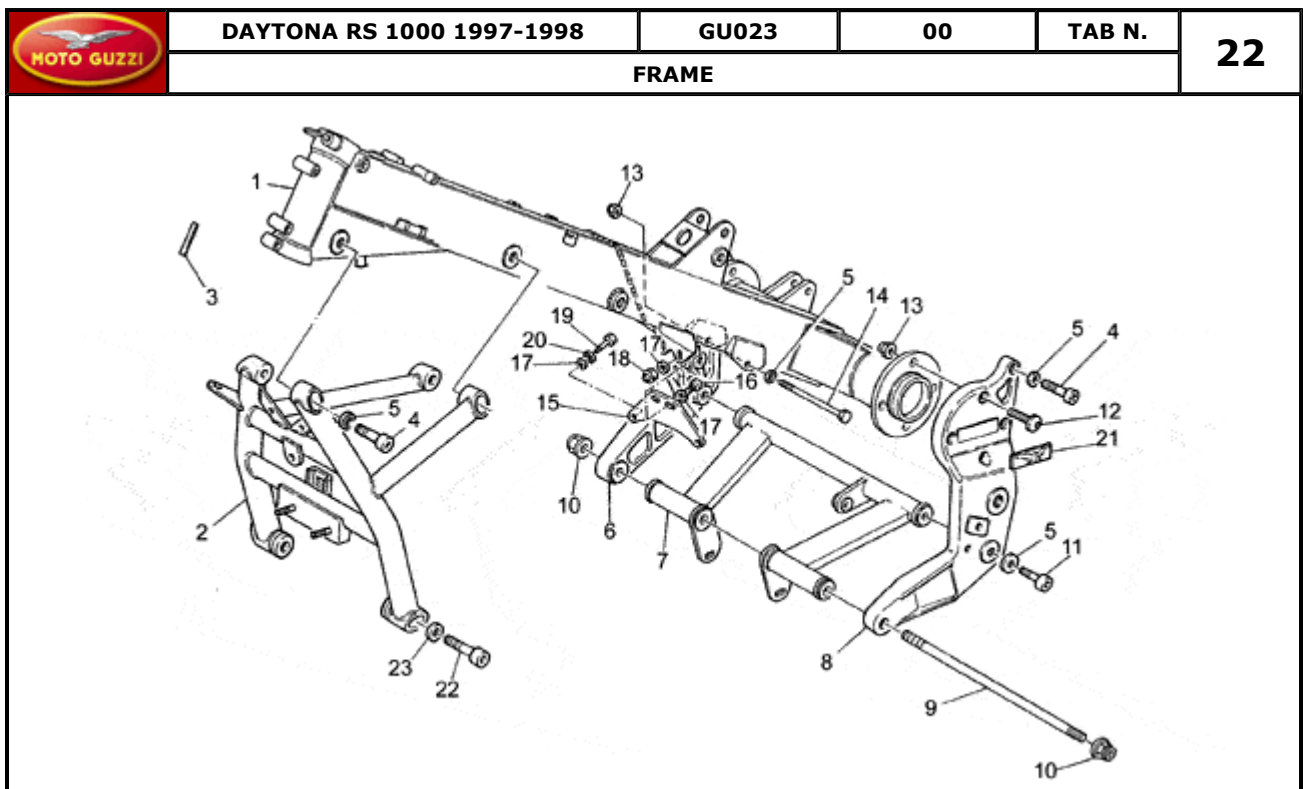


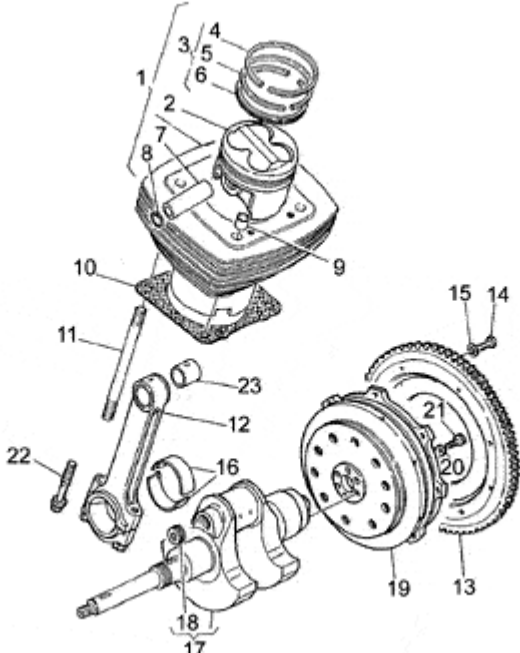
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Frame	-	-	-	-	n.l	GU01400100	1
2	Cradle	-	-	-	-	n.l	GU01420200	1
3	Guard decal	-	-	-	-	-	GU02931600	1
4	Screw	-	-	-	-	-	GU98610525	1
5	Washer 10,5x16x1	-	-	-	-	-	GU19149800	1
6	RH plate	-	-	-	-	g.ghi	GU01415750	1
7	Plate connection frame	-	-	-	-	-	GU37420105	1
8	LH plate	-	-	-	-	g.ghi	GU01415850	1
9	Stud bolt	-	-	-	-	-	GU30419601	1
10	Tie rod	-	-	-	-	-	GU92660112	1
11	Screw	-	-	-	-	-	GU98610540	1
12	Screw M10X30	-	-	-	-	-	GU98231030	1
13	Nut M10X1,5	-	-	-	-	-	GU92630110	1
14	Screw	-	-	-	-	-	GU98072595	1
15	Gearbox connecting plate	-	-	-	-	-	GU37202805	1
16	Screw	-	-	-	-	-	GU98622420	1
17	Washer	-	-	-	-	-	GU95004208	1
18	Nut	-	-	-	-	-	GU92630508	1
19	Screw sp.60mm	-	-	-	-	-	GU98072460	1
	Screw sp.65mm	-	-	-	-	-	GU98072465	1
20	Washer 8,4X13X0,8	-	-	-	-	-	GU14615901	1
21	Decal "Aquila"	-	-	-	-	-	GU01517700	1
22	Screw	-	-	-	-	-	GU98612535	1
23	Washer 13x18x1,7	-	-	-	-	-	GU30217900	1




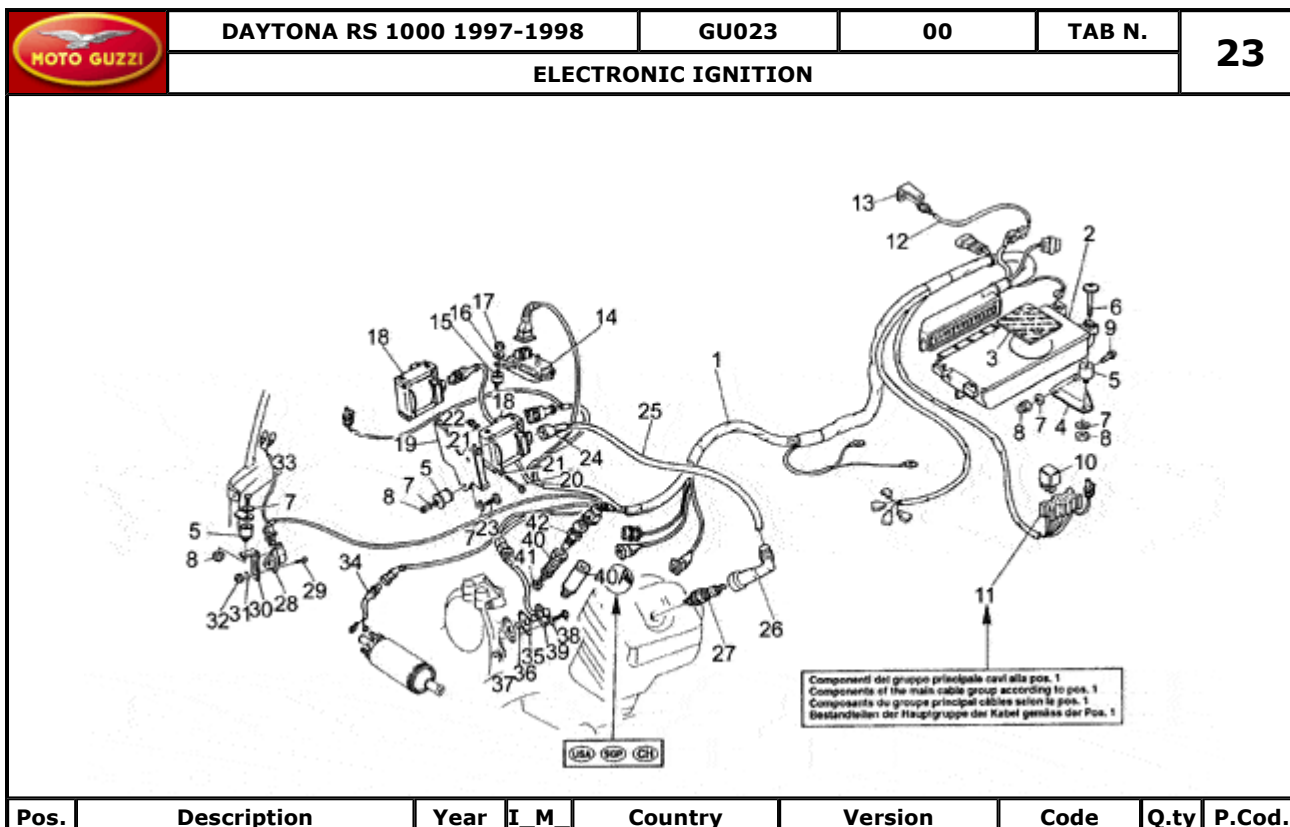

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Injection wiring	-	-	-	-	GU01725850	1	
2	Electronic control unit	-	-	-	-	GU01729550	1	
	Electronic control unit	-	-	CH-SGP-USA	-	GU01729551	1	
3	Tamperproof dataplate	-	-	-	-	GU01732001	1	
4	Support plate	-	-	-	-	GU01728700	1	
5	Silent-block	-	-	-	-	GU93222020	8	
6	Screw	-	-	-	-	GU98230616	4	
7	Washer	-	-	-	-	GU95000206	1	
8	Nut M6x1	-	-	-	-	GU92630106	9	
9	Screw	-	-	-	-	GU98230612	1	
10	Relay Siemens A302/B1008	-	-	-	-	GU30732560	2	
11	Relais support	-	-	-	-	GU30732400	2	
12	Led	-	-	-	-	GU29727860	1	
13	Support plate	-	-	-	-	GU30732900	1	
14	Pressure sensor	-	-	-	-	GU29727061	1	
15	Silent-block	-	-	-	-	GU93211315	3	
16	Washer	-	-	-	-	GU95100025	3	
17	Nut	-	-	-	-	GU92601004	3	
18	HT coil	-	-	-	-	GU30716500	2	
19	Clamp	-	-	-	-	GU01407400	1	
20	Screw	-	-	-	-	GU98620130	4	
21	Washer	-	-	-	-	GU95004204	8	
22	Nut M4x0,7	-	-	-	-	GU92630104	4	
23	Screw	-	-	-	-	GU98054308	3	
24	Cap	-	-	-	-	GU14717600	2	
25	HT cable	-	-	-	-	GU01718350	2	
26	Spark cap	-	-	-	-	GU30717402	2	
27	Spark plug NGK DR9EA	-	-	-	-	GU30717002	2	
28	Air temp. Sensor	-	-	-	-	GU30729331	1	
29	Screw	-	-	-	-	GU98610110	4	
30	Sensor support	-	-	-	-	GU30728230	1	
31	Washer	-	-	-	-	GU95120032	2	
32	Nut	-	-	-	-	GU92601003	2	


33	Screw	-	-	-	-	-	GU98230610	1
34	Fuel pump wiring	-	-	-	-	-	GU01738500	1
35	Phase/revolution sensor	-	-	-	-	-	GU01721600	1
36	Gasket 0,5 mm	-	-	-	-	-	GU29722760	3
37	O-ring	-	-	-	-	-	GU90706141	1
38	Hex socket screw M5X10	-	-	-	-	-	GU98622210	2
39	Washer	-	-	-	-	-	GU95004205	2
40	Sensor support	-	-	CH-SGP-USA	-	-	GU02163300	1
	Sensor support	-	-	-	-	-	GU30163301	1
41	Washer 10,2x18x2	-	-	-	-	-	GU95004210	1
42	Oil temperature sensor	-	-	-	-	-	GU29729461	1

		DAYTONA RS 1000 1997-1998		GU023	00	TAB N.	24	
DRIVE SHAFT								
								
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Cylinder with piston	-	-	-	-	g,ghi	GU01060150	2
2	Piston	-	-	-	-	-	GU02060400	2
3	Piston rings set	-	-	-	-	-	GU30060600	2
4	Upper segment	-	-	-	-	-	GU30060700	2
5	Lower segment	-	-	-	-	-	GU30060900	2
6	Oil scraper ring	-	-	-	-	-	GU30061000	2
7	Piston pin	-	-	-	-	-	GU30061241	2
8	Stop ring	-	-	-	-	-	GU90351038	4
9	Bush	-	-	-	-	-	GU91111113	4
10	Cylinder base gasket	-	-	-	-	-	GU30020800	2
11	Stud bolt	-	-	-	-	-	GU30021700	8
12	Connecting rod	-	-	-	CL	-	GU30061541	2
13	Chain ring	-	-	-	-	-	GU37067905	1
14	Screw TCEI M6x12	-	-	-	-	-	GU37067705	8
15	Washer 6,4x10x0,7	-	-	-	-	-	GU14217901	8
16	Bearing half-shell	-	-	-	std	-	GU37062005	4
	Bearing half-shell 0,254 mm	-	-	-	M	-	GU37062006	4
	Bearing half-shell 0,508 mm	-	-	-	M	-	GU37062007	4
	Bearing half-shell 0,762 mm	-	-	-	M	-	GU37062008	4
17	Drive shaft	-	-	-	-	-	GU30064145	1
18	Plug	-	-	-	-	-	GU12065400	1
19	Flywheel	-	-	-	-	-	GU01067000	1
20	Washer 8,4X13X0,8	-	-	-	-	-	GU14615901	6
21	Screw M8X25	-	-	-	-	-	GU12067701	6
22	Connecting rod screw	-	-	-	-	-	GU30062241	4
23	Bush	-	-	-	-	-	GU30061841	2

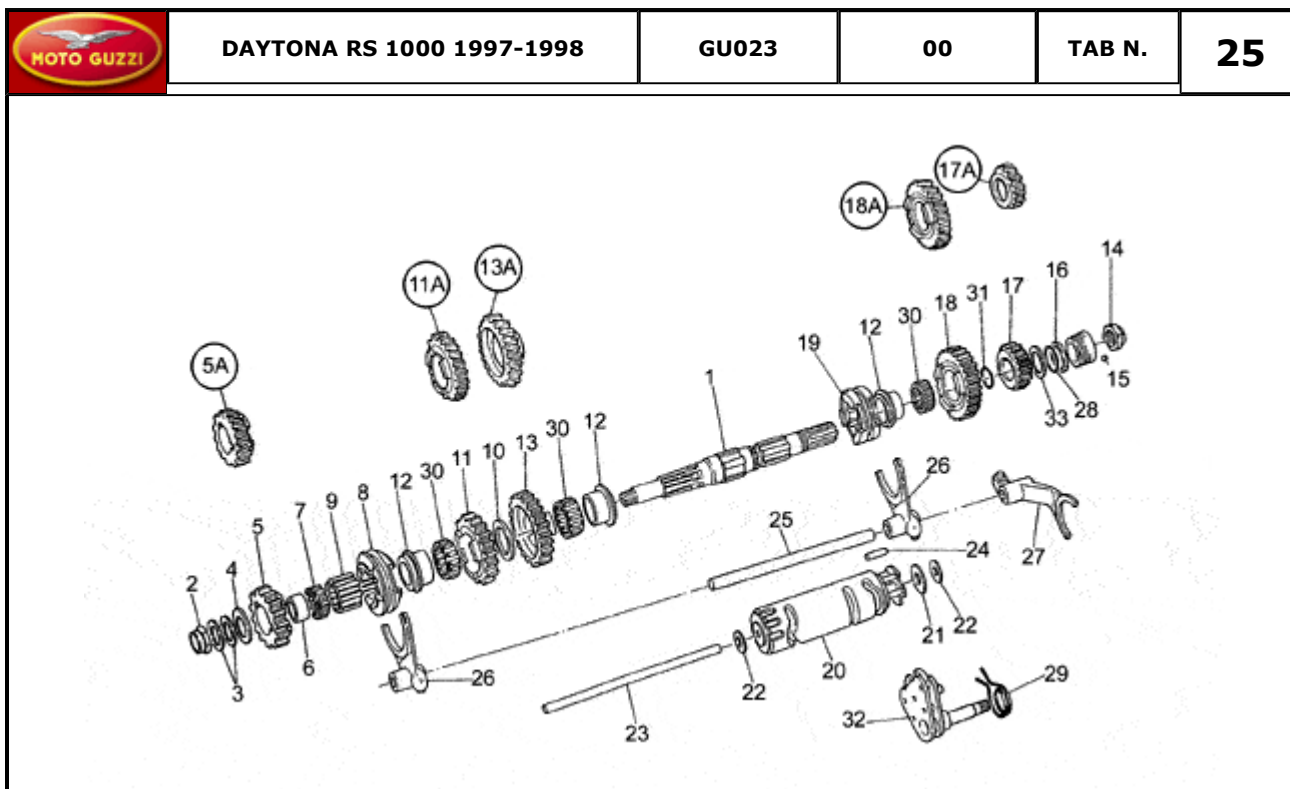
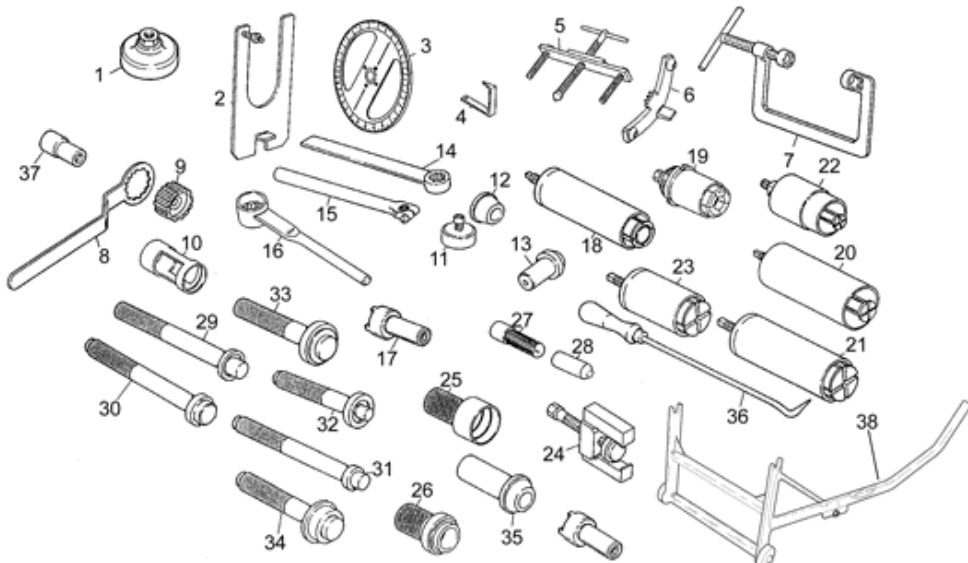



Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Driven shaft	-	-	-	-	GU30213602	1	
2	Nut	-	-	-	-	GU14217410	1	
3	Shim 17,25x27x0,5	-	-	-	-	GU43083810	2	
4	Clearance washer 17,1x30	-	-	-	-	GU14215400	1	
5	Gear 4a Z=20	-	-	-	C2	GU01215100	1	
	Gear 4a Z=20	-	-	CH	-	GU14215110	1	
	Gear 4a Z=20	-	-	-	C1	GU30215100	1	
6	Ring 4a	-	-	-	-	GU92259017	1	
7	Roller cage 4a A.S.	-	-	-	-	GU92251022	1	
8	Sliding sleeve 3a-4a	-	-	CH	-	GU14231012	1	
	Hose 3a-4a AS	-	-	-	-	GU30231000	1	
9	Hose	-	-	-	-	GU14232512	1	
10	Washer 25x40x3	-	-	-	-	GU14218011	1	
11	Gear 3a Z=22	-	-	CH	-	GU14214810	1	
	Gear 3a Z=23	-	-	-	C1	GU30214800	1	
	Gear 3a Z=23	-	-	-	C2	GU01214800	1	
12	Bush 1a-2a-3a AS	-	-	-	-	GU14213001	3	
13	Gear 2a Z=25	-	-	-	C2	GU01214500	1	
	Gear 2a Z=25	-	-	CH	-	GU14214510	1	
	Gear 2a Z=25	-	-	-	C1	GU30214500	1	
14	Nut	-	-	-	-	GU14219310	1	
15	Ball	-	-	-	-	GU92295702	1	
16	Washer 22,1x32x2	-	-	-	-	GU14217300	1	
17	Gear 5a AS Z=21	-	-	CH	-	GU14215213	1	
	Gear 5a Z=19	-	-	-	C1	GU30215203	1	
	Gear 5a Z19	-	-	-	C2	GU01215200	1	
18	Gear 1a Z=29	-	-	-	C2	GU01214200	1	
	Gear 1a Z=28	-	-	CH	-	GU14214210	1	
	Gear 1a Z=29	-	-	-	C1	GU30214200	1	
19	Sliding sleeve 1a-2a	-	-	CH	-	GU14230711	1	
	Sliding sleeve 1a/2a AS	-	-	-	-	GU30230700	1	
20	Shift cam	-	-	-	-	GU14234405	1	
21	Washer 8,2x28x1	-	-	-	-	GU14235500	1	

22	Shim 1 mm	-	-	-	-	-	GU55235002	3
	Shim 1,2 mm	-	-	-	-	-	GU55235003	3
	Shim 0,8 mm	-	-	-	-	-	GU55235001	3
	Shim 0,6 mm	-	-	-	-	-	GU55235000	3
23	Rod	-	-	-	-	-	GU14234300	1
24	Pin	-	-	-	-	-	GU14234600	4
25	Rod	-	-	-	-	-	GU14232400	1
26	Fork 1a-2a-3a-4a	-	-	-	-	-	GU14230501	2
27	Fork 5a	-	-	-	-	-	GU14231201	1
28	O-ring 21,95x1,78	-	-	-	-	-	GU90706219	1
29	Spring	-	-	-	-	-	GU28238261	1
30	Roller cage 30x35x13	-	-	-	-	-	GU92251030	3
31	O-ring 20,24X2,62	-	-	-	-	-	GU90706203	1
32	Preselection complete	-	-	-	-	-	GU28236260	1
33	Washer	-	-	-	-	-	GU28217350	1

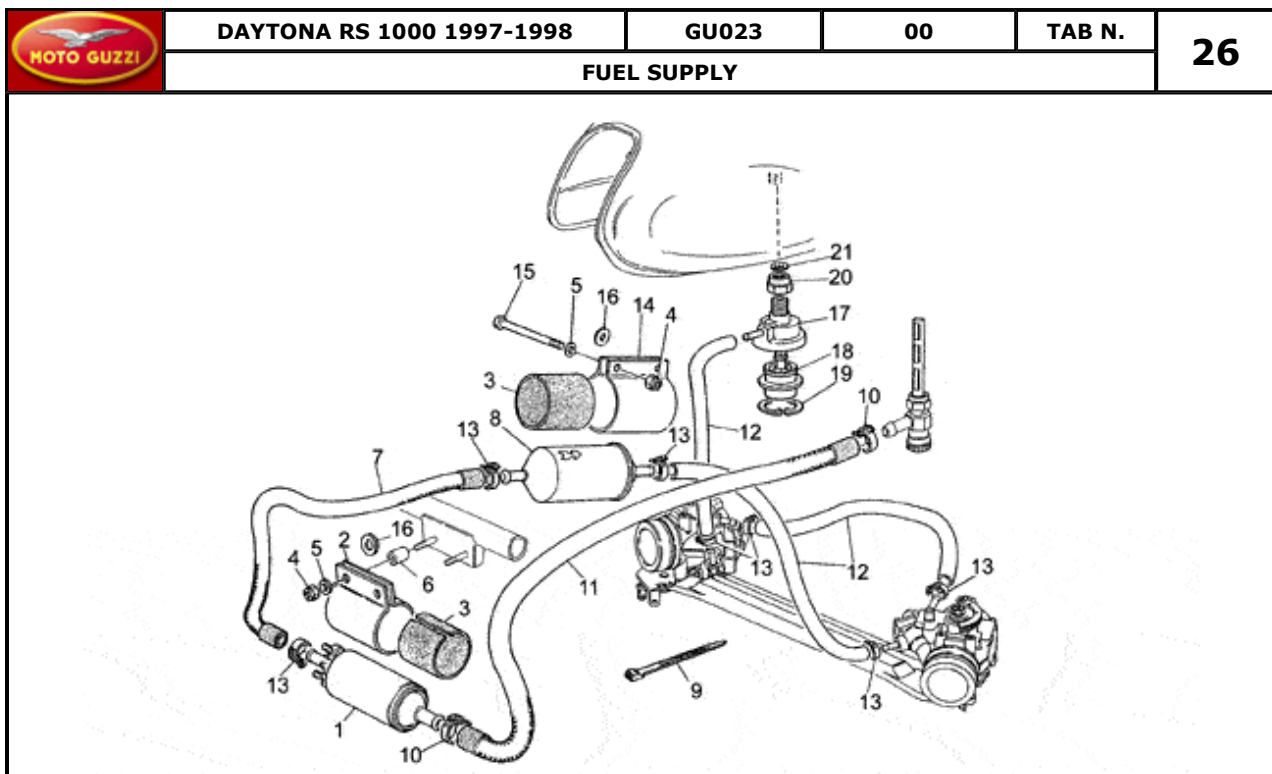


Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Fuel pump	-	-	-	-	GU29107261	1	
2	Hose clamp	-	-	-	-	GU30107300	1	
3	Support rubber part	-	-	-	-	GU30105800	2	
4	Nut M6x1	-	-	-	-	GU92630206	4	
5	Washer	-	-	-	-	GU95000206	8	
6	Spacer	-	-	-	-	GU91180618	2	
7	Pipe from p"ump to filter	-	-	-	-	GU30106100	1	
8	Fuel filter	-	-	-	-	GU30106000	1	
9	Hose clamp 8,8x185	-	-	-	-	GU30609600	4	
10	Hose clamp	-	-	-	-	GU12157900	2	
11	Fuel pipe	-	-	-	-	GU30106500	1	
12	Pipe SAEJ30R9	-	-	-	-	GU00823952080	1	
13	Hose clamp	-	-	-	-	GU93305017	7	
14	Hose clamp	-	-	-	-	GU30113800	1	
15	Screw	-	-	-	-	GU98052370	2	
16	Washer 6,4x12x1,2	-	-	-	-	GU95100141	4	
17	Voltage regulator support	-	-	-	-	GU01112900	1	
18	Fuel pressure regulator	-	-	-	-	GU01112800	1	
19	Circlip	-	-	-	-	GU90272037	1	
20	Ring nut	-	-	-	-	GU30105200	1	
21	Gasket	-	-	-	-	GU90714103	1	

		DAYTONA RS 1000 1997-1998		GU023	00	TAB N.	27	
SPECIFIC TOOLS I								
								
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Wrench remov.cover sump/filter	-	-	-	32296C	-	GU01929100	1
2	Gearbox housing support	-	-	-	-	-	GU14929600	1
3	Index plate tim.sett./ign.cont	-	-	-	-	-	GU19929600	1
4	Arrow tim.set.ignition control	-	-	-	-	-	GU17947560	1
5	Flange removal flywheel side	-	-	-	-	-	GU12913600	1
6	Lock flywh.starter motor gear	-	-	-	-	-	GU12911801	1
7	Valve removal and fitting	-	-	-	-	-	GU10907200	1
8	Locking clutch internal body	-	-	-	-	-	GU30912810	1
9	Tool for clutch assembly	-	-	-	-	-	GU30906510	1
10	Clutch shaft disass.	-	-	-	-	-	GU12905900	1
11	Seal ring onto flange fly.side	-	-	-	-	-	GU14927100	1
12	Flange flywheel side	-	-	-	-	-	GU12912000	1
13	Seal ring onto tim.syst.cover	-	-	-	-	-	GU14927200	1
14	Transmis.shaft locking tool	-	-	-	-	-	GU12907100	1
15	pre-selector tool	-	-	-	-	-	GU14928700	1
16	Transmission shaft locking	-	-	-	-	-	GU14905400	1
17	Key	-	-	-	-	-	GU14912603	1
18	Roller bearing extractor	-	-	-	-	-	GU14913100	1
19	Int. race extractor	-	-	-	-	-	GU14928500	1
20	Clutch shaft bearing extractor	-	-	-	-	-	GU17949260	1
21	Bearing ext. race extractor	-	-	-	-	-	GU17945060	1
22	Ball bearing extractor	-	-	-	-	-	GU14907000	1
23	Rollerball bear.trans.housing	-	-	-	-	-	GU12906900	1
24	Bearing int. race extractor	-	-	-	-	-	GU17948360	1
25	Internal race punch	-	-	-	-	-	GU17948460	1
26	Bearing ext. race punch	-	-	-	-	-	GU17948860	1
27	Internal ring punch	-	-	-	-	-	GU17945460	1
28	Internal ring punch	-	-	-	-	-	GU14928600	1
29	Punch ransmis.shaft bearing	-	-	-	-	-	GU14928900	1
30	Punch seal front fork sleeve	-	-	-	-	-	GU14929100	1
31	Roller bearing punch	-	-	-	-	-	GU14928800	1
32	Ball bearing punch	-	-	-	-	-	GU14929000	1
33	Oil seal punch	-	-	-	-	-	GU14929400	1
34	Oil seal punch	-	-	-	-	-	GU14929500	1
35	External race punch	-	-	-	-	-	GU17945160	1
36	Control fork positioner	-	-	-	-	-	GU14929300	1
37	Wheel pin locking tool	-	-	-	-	-	GU01929300	1
38	Central stand	-	-	-	01900N	-	GU00979717	1

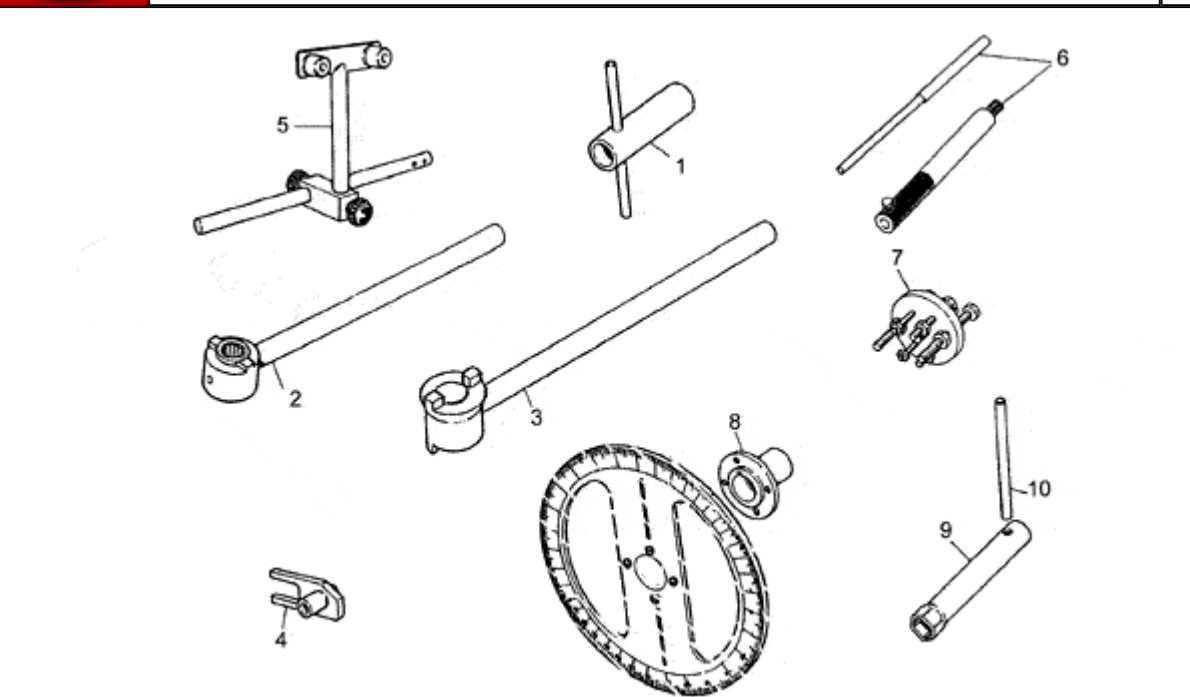
DAYTONA RS 1000 1997-1998		GU023		00		TAB N.		28	
SPECIFIC TOOLS II									
									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	Camshaft turning tool	-	-	-	-	GU30927200	1		
2	Camshaft pulley tool	-	-	-	-	GU30927300	1		
3	Secondary shaft pulley tool	-	-	-	-	GU30927600	1		
4	Timing belt tensioner tool	-	-	-	-	GU30948600	1		
5	Comparator support	-	-	-	-	GU69907850	1		
6	Comparator head support	-	-	-	-	GU30948200	1		
7	Oil pump gear extractor	-	-	-	-	GU30948300	1		
8	Index plate hub	-	-	-	-	GU30949600	1		
9	Spark plug key	-	-	-	-	GU61901900	1		
10	Pin	-	-	-	-	GU30908400	1		



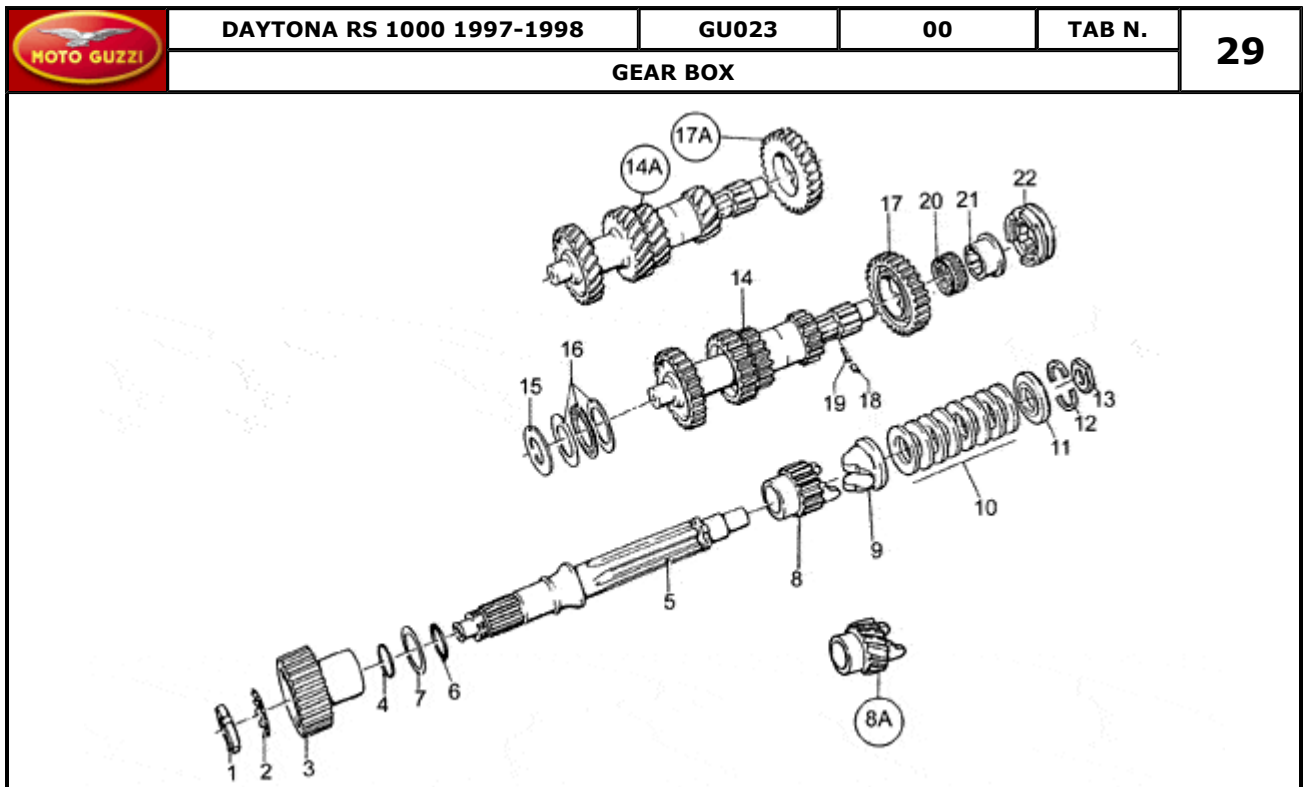


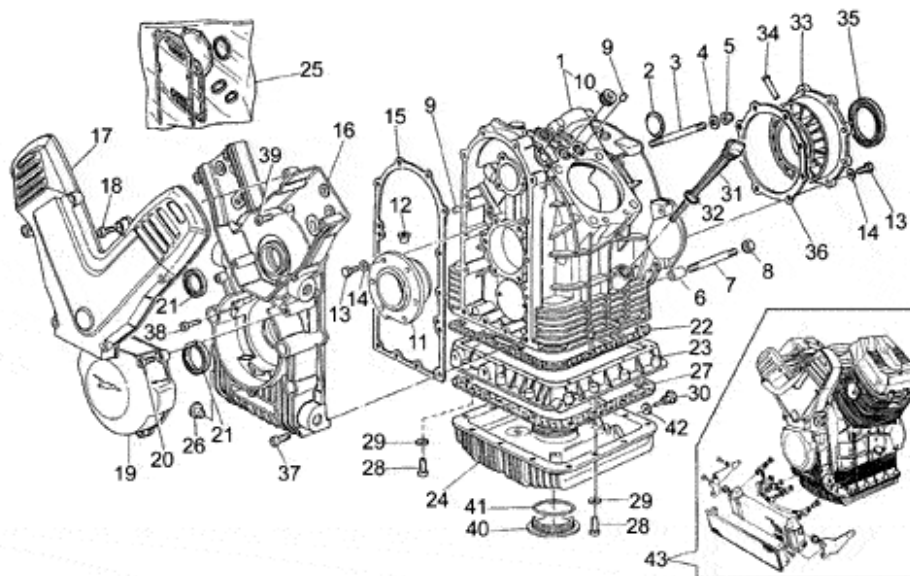
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Ring nut	-	-	-	-	GU93601022	1	
2	Washer 22x20x3,9	-	-	-	-	GU95028022	1	
3	Clutch gear	-	-	-	-	GU30081810	1	
4	O-ring 23,52x1,78	-	-	-	-	GU90706235	1	
5	Clutch shaft	-	-	-	-	GU14210702	1	
6	O-ring 20,24X2,62	-	-	-	-	GU90706203	1	
7	Oil-spreading washer 25,1x36x0,5	-	-	-	-	GU14218401	1	
8	Gear Z=17	-	-	-	C2	GU01211100	1	
	Neutral gear Z=17	-	-	-	C1	GU30211101	1	
	Idle gear Z=17	-	-	CH	-	GU30211160	1	
9	Hose	-	-	-	-	GU30211260	1	
10	Belleville spring	-	-	-	-	GU30211560	8	
11	Disc	-	-	-	-	GU30211660	1	
12	Half ring	-	-	-	-	GU12211700	2	
13	Spacer	-	-	-	-	GU14219401	1	
14	Primary gear shaft	-	-	CH	-	GU14210513	1	
	Primary gear shaft	-	-	-	C1	GU30210500	1	
	Primary gear shaft	-	-	-	C2	GU01210500	1	
15	Thrust washer sp.2	-	-	-	-	GU18211050	1	
	Thrust washer sp.2,1	-	-	-	-	GU18211051	1	
	Thrust washer sp.2,2	-	-	-	-	GU18211052	1	
	Thrust washer sp.2,4	-	-	-	-	GU18211054	1	
16	Roller bearing	-	-	-	-	GU92258525	1	
17	Gear 5a Z=26	-	-	-	C2	GU01212000	1	
	Gear 5a Z=28	-	-	CH	-	GU14212013	1	
	Gear 5a Z=26	-	-	-	C1	GU30212003	1	
18	Roller	-	-	-	-	GU92296750	1	
19	Spring	-	-	-	-	GU94321051	1	
20	Roller cage 30x35x13	-	-	-	-	GU92251030	1	
21	Bush 5a AP	-	-	-	-	GU14212210	1	
22	Sliding sleeve 5a	-	-	-	-	GU30231500	1	
	Sliding sleeve 5a	-	-	CH	-	GU14231510	1	

	DAYTONA RS 1000 1997-1998	GU023	00	TAB N.	<b>30</b>
	<b>DRIVESHAFT</b>				

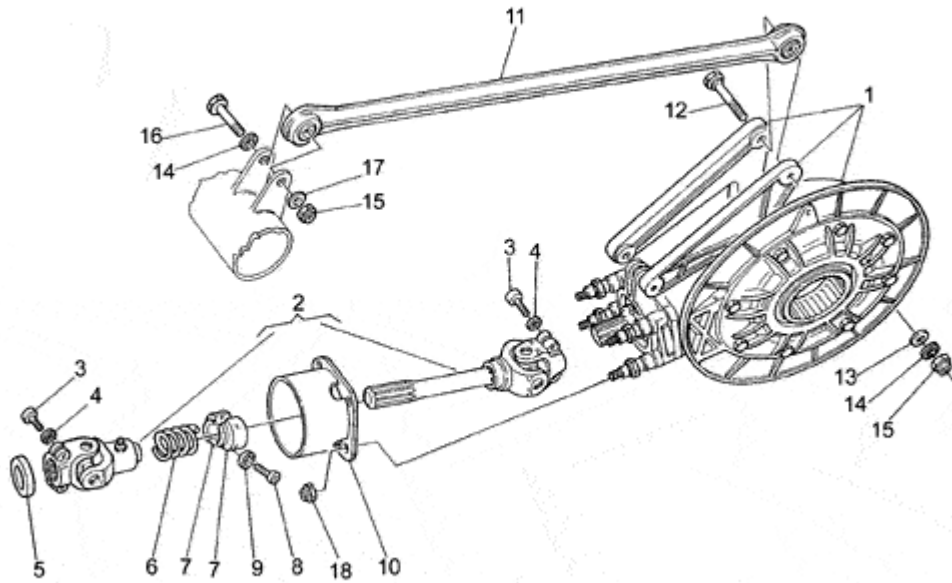


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Transmission complete	-	-	-	-	g,ghi	GU01350250	1
2	Drive shaft	-	-	-	-	-	GU30329502	1
3	Screw	-	-	-	-	-	GU98832430	4
4	Washer 8,4X13X0,8	-	-	-	-	-	GU14615901	4
5	Spacer	-	-	-	-	-	GU30334600	1
6	Spring	-	-	-	-	-	GU28037460	1
7	Clump	-	-	-	-	-	GU30211700	2
8	Hex socket screw M5x16	-	-	-	-	-	GU98612216	2
9	Washer 5,9X3X0,8	-	-	-	-	-	GU29217960	2
10	Cover	-	-	-	-	-	GU01358300	1
11	Reaction rod assy.	-	-	-	-	-	GU37358806	1
12	Screw M10X69	-	-	-	-	-	GU30357800	1
13	Washer	-	-	-	-	-	GU95000210	1
14	Washer 10,5x16x1	-	-	-	-	-	GU19149800	2
15	Nut M10x1,25	-	-	-	-	-	GU92630410	2
16	Screw M10x59	-	-	-	-	-	GU37357706	1
17	Spacer	-	-	-	-	-	GU95100303	1
18	Self-locking nut M6X1	-	-	-	-	-	GU92630506	4

	<b>DAYTONA RS 1000 1997-1998</b>	<b>GU023</b>	<b>00</b>	<b>TAB N.</b>	<b>31</b>
---	----------------------------------	--------------	-----------	---------------	-----------




Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Crankcase	-	-	-	-	g.ghi	GU01000750	1
2	Disc	-	-	-	-	-	GU12003900	1
3	Stud bolt M8X66	-	-	-	-	-	GU96508066	4
4	Washer	-	-	-	-	-	GU95004208	5
5	Nut	-	-	-	-	-	GU92781081	2
6	Coupling bush	-	-	-	-	-	GU12018900	2
7	Stud bolt M8x75	-	-	-	-	-	GU96508075	2
8	Nut M8X1,25	-	-	-	-	-	GU92602208	4
9	Pin	-	-	-	-	-	GU95512081	4
10	Plug	-	-	-	-	-	GU12065400	4
11	Flange min.0,2 mm	-	-	-	M	-	GU14011901	1
	Complete flange	-	-	-	std	-	GU14011900	1
12	Pin	-	-	-	-	-	GU12012200	1
13	Screw M8X25	-	-	-	-	-	GU98054425	14
14	Spring washer 8x15x0,3	-	-	-	-	-	GU61270300	14
15	Cover gasket	-	-	-	-	-	GU12001200	1
16	Timing system cover	-	-	-	-	g.ghi	GU01001450	1
17	Cover	-	-	-	-	-	GU30056800	1
18	Screw	-	-	-	-	-	GU98612320	6
19	Cover	-	-	-	-	-	GU30001600	1
20	Hex socket screw M6X16	-	-	-	-	-	GU98622316	3
21	Gasket ring 28x38x7	-	-	-	-	-	GU90402840	2
22	Gasket	-	-	-	-	-	GU01003650	1
23	Motor oil flange	-	-	-	-	-	GU01003252	1
24	Motor oil cup	-	-	-	-	g.ghi	GU01003550	1
25	Gasket set	-	-	-	-	-	GU01998950	1
26	Plug	-	-	-	-	-	GU30002100	1
27	Gasket	-	-	-	-	-	GU01003600	1
28	Screw	-	-	-	-	-	GU98622322	28
29	Washer 6,15x11x0,8	-	-	-	-	-	GU95004206	28
30	Oil unload plug	-	-	-	-	-	GU30003770	1
31	Oil level plug	-	-	-	-	-	GU01004900	1
32	O-ring 17,86X2,62	-	-	-	-	-	GU90706178	1
33	Flange min.0,4 mm	-	-	-	-	-	GU12011402	1
	Flange min.0,6 mm	-	-	-	-	-	GU12011403	1

	Flange min.0,2 mm	-	-	-	-	-	GU12011401	1
	Complete flange	-	-	-	std	-	GU12011400	1
34	Pin	-	-	-	-	-	GU12011700	1
35	Gasket ring	-	-	-	-	-	GU90405367	1
36	Gasket	-	-	-	-	-	GU12011800	1
37	Screw M6X35	-	-	-	-	-	GU98620335	8
38	Hex socket screw M6X25	-	-	-	-	-	GU98622325	4
39	Screw	-	-	-	-	-	GU98622320	2
40	Plug	-	-	-	-	-	GU01003400	1
41	O-ring	-	-	-	-	-	GU90706948	1
42	Gasket	-	-	-	-	-	GU10528900	1
43	Engine w/o gearbox	-	-	CH-SGP-USA	-	g.ghi	GU400034200600	1
	Engine w/o gearbox	-	-	-	-	g.ghi	GU01690250	1

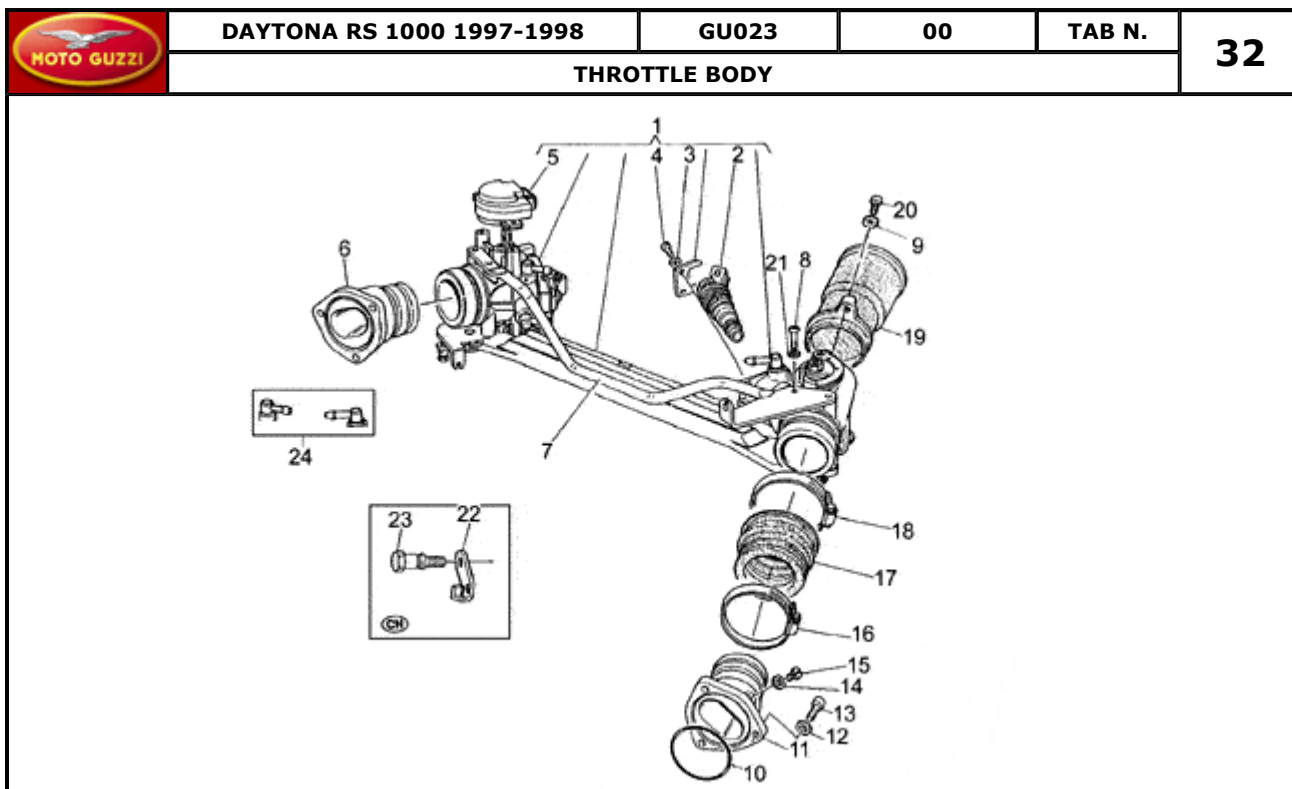


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Throttle body	-	-	-	-	GU30112501	1	
2	Injector IW724	-	-	-	-	GU30530500	2	
3	Washer	-	-	-	-	GU95020104	4	
4	Screw	-	-	-	-	GU98200410	4	
5	Throttle body sensor	-	-	-	-	GU30530501	1	
6	RH intake manifold	-	-	-	g.ghi	GU30115045	1	
7	Support	-	-	-	-	GU30110500	1	
8	Hex socket screw M5x10	-	-	-	-	GU98230510	4	
9	Washer	-	-	-	-	GU95004205	4	
10	Gasket ring	-	-	-	-	GU90706552	2	
11	LH intake manifold	-	-	-	g.ghi	GU30115046	1	
12	Washer 6,15x11x0,8	-	-	-	-	GU95004206	6	
13	Hex socket screw M6X25	-	-	-	-	GU98622325	6	
14	Washer 6,25x10x1,5	-	-	-	-	GU95100116	2	
15	Screw	-	-	-	-	GU98310610	2	
16	Clamp	-	-	-	-	GU12548401	2	
17	Intake hose	-	-	-	-	GU30114300	2	
18	Hose clamp 62/82 mm	-	-	-	-	GU12548201	2	
19	Intake hose	-	-	-	-	GU01114450	2	
20	Screw	-	-	-	-	GU98054216	4	
21	Washer 5,9X3X0,8	-	-	-	-	GU29217960	4	
22	Throttle bracket	-	-	CH	-	GU02118601	1	
23	Shear rivet	-	-	CH	-	GU30468104	2	
24	Sparkplug caps kit	-	-	-	01699N	GU02999200	1	

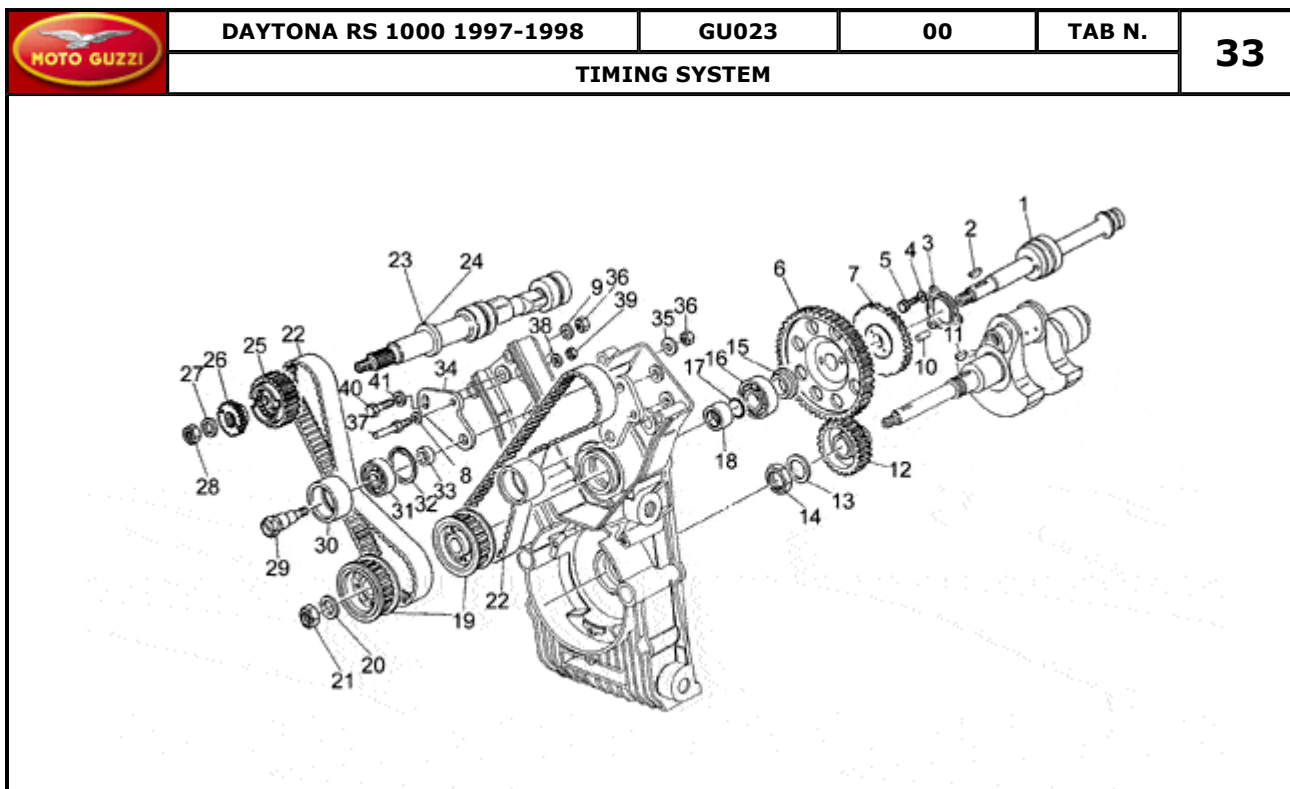


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Shaft	-	-	-	-	GU30052000	1	
2	Transmission key	-	-	-	-	GU91600565	1	
3	Flange	-	-	-	-	GU01054000	1	
4	Washer 6,5x11x2	-	-	-	-	GU95120065	3	
5	Hex screw M6X20	-	-	-	-	GU98054320	3	
6	Gear	-	-	-	-	GU01054550	1	
7	Wheel speed sensor, left front	-	-	-	-	GU01051700	1	
8	Washer	-	-	-	-	GU95000206	2	
9	Spring washer 8x15x0,3	-	-	-	-	GU61270300	2	
10	Pin	-	-	-	-	GU14234600	2	
11	Transmission key	-	-	-	-	GU91702355	1	
12	Gear	-	-	-	-	GU30072000	1	
13	Washer 25,5x35x2	-	-	-	-	GU95100837	1	
14	Nut M25	-	-	-	-	GU92602525	1	
15	Spacer	-	-	-	-	GU30057700	1	
16	Bearing 20X47X14	-	-	-	-	GU92201220	1	
17	Gasket ring 18,77X1,78	-	-	-	-	GU90706188	1	
18	Spacer	-	-	-	-	GU30057900	1	
19	Distribution pulley	-	-	-	-	GU30057400	2	
20	Washer 17X27X2	-	-	-	-	GU95004217	1	
21	Nut M6X1,5	-	-	-	-	GU92602316	1	
22	Timing belt	-	-	-	-	GU30055300	2	
23	RH camshaft	-	-	CH-SGP-USA	-	GU30053300	1	
	RH camshaft	-	-	-	-	GU30053340	1	
24	LH camshaft	-	-	CH-SGP-USA	-	GU30053301	1	
	LH camshaft	-	-	-	-	GU30053341	1	
25	Camshaft pulley	-	-	-	-	GU30056500	2	
26	Gear	-	-	-	-	GU30056400	2	
27	Washer	-	-	-	-	GU95100524	2	
28	Nut M14X1,5	-	-	-	-	GU92602514	2	
29	Belt tensioner pin	-	-	-	-	GU30059300	2	
30	Belt tensioner	-	-	-	-	GU30058700	2	
31	Bearing 15X42X13	-	-	-	-	GU92201414	2	

32	Circlip	-	-	-	-	-	GU90272042	2
33	Spacer	-	-	-	-	-	GU91181206	2
34	Plate	-	-	-	-	-	GU30058300	2
35	Washer	-	-	-	-	-	GU30054800	2
36	Nut M8X1,25	-	-	-	-	-	GU92602208	4
37	Pin	-	-	-	-	-	GU30059400	2
38	Washer	-	-	-	-	-	GU95129115	2
39	Nut M6X1,5	-	-	-	-	-	GU92602006	2
40	Screw M8X22	-	-	-	-	-	GU98054422	2
41	Washer	-	-	-	-	-	GU95000208	2

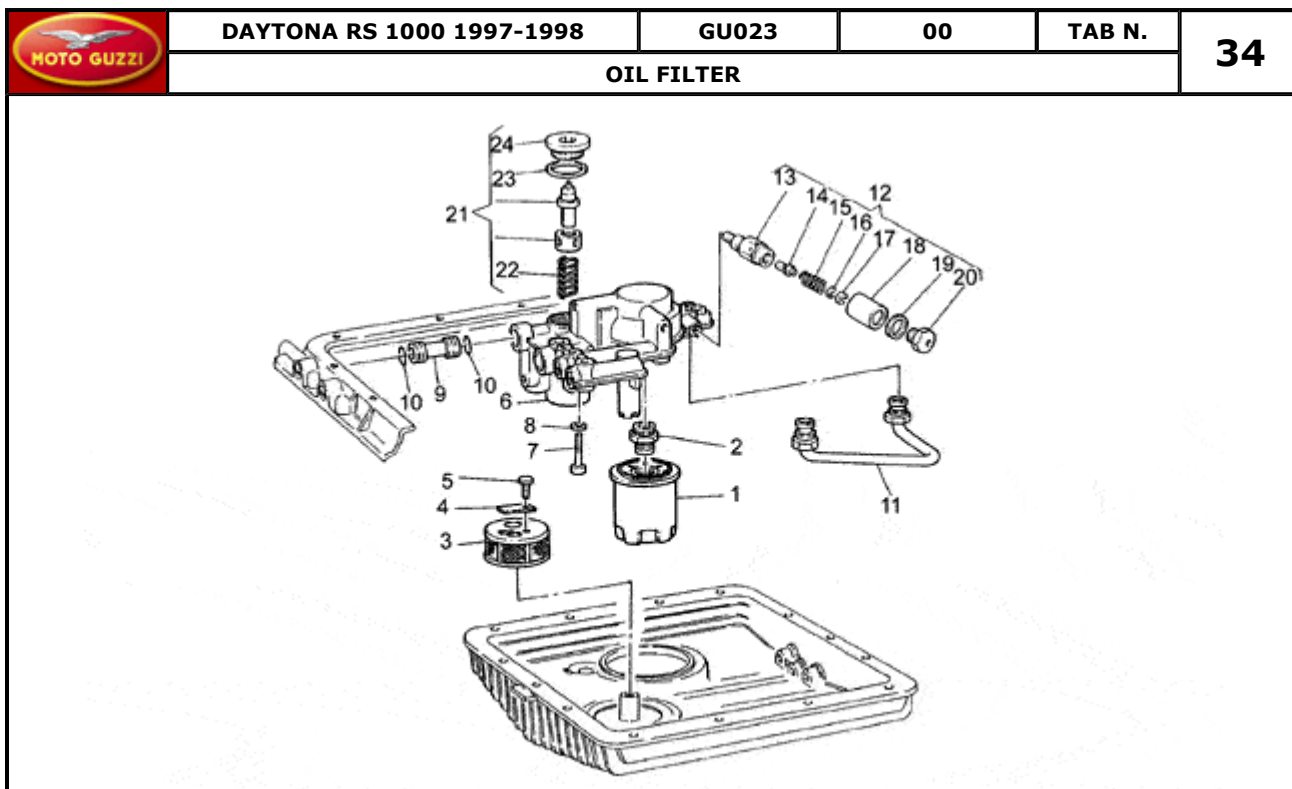


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Oil filter	-	-	-	-	GU30153000	1	
2	Union	-	-	-	-	GU30003800	1	
3	Oil filter	-	-	-	-	GU01152200	1	
4	Plate	-	-	-	-	GU95187006	1	
5	Hex screw M6X16	-	-	-	-	GU98054316	1	
6	Support	-	-	-	-	GU01003800	1	
7	Screw	-	-	-	-	GU98620340	4	
8	Washer 6,15x11x0,8	-	-	-	-	GU95004206	4	
9	Hose union	-	-	-	-	GU01005500	2	
10	O-ring 13,95x2,92	-	-	-	-	GU90706140	4	
11	Pipe	-	-	-	-	GU01005701	1	
12	Oil valve cpl.	-	-	-	-	GU30158201	1	
13	Valve body	-	-	-	-	GU30158701	1	
14	Piston	-	-	-	-	GU30150900	1	
15	Spring	-	-	-	-	GU94321079	1	
16	Washer 6,15x11x0,8	-	-	-	-	GU95004206	1	
17	Washer	-	-	-	-	GU30158900	1	
18	Cup	-	-	-	-	GU30158800	1	
19	Washer 18,25x24x1	-	-	-	-	GU18144350	1	
20	Plug	-	-	-	-	GU30159000	1	
21	Thermostatic valve compl.	-	-	-	-	GU01163500	1	
22	Spring	-	-	-	-	GU20164010	1	
23	Copper gasket	-	-	-	-	GU01163700	1	
24	Plug	-	-	-	-	GU01163600	1	


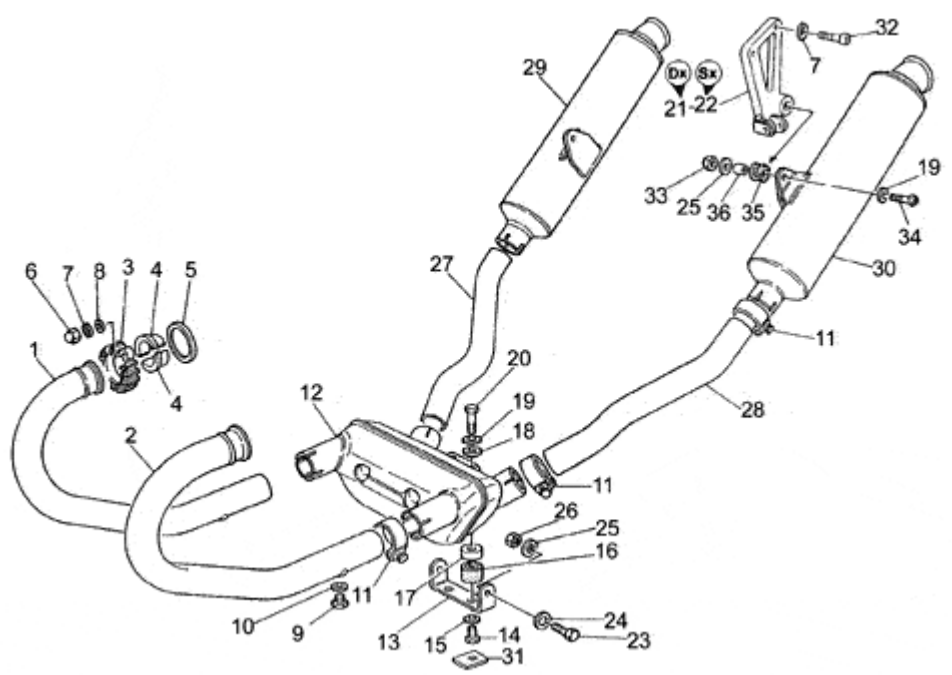


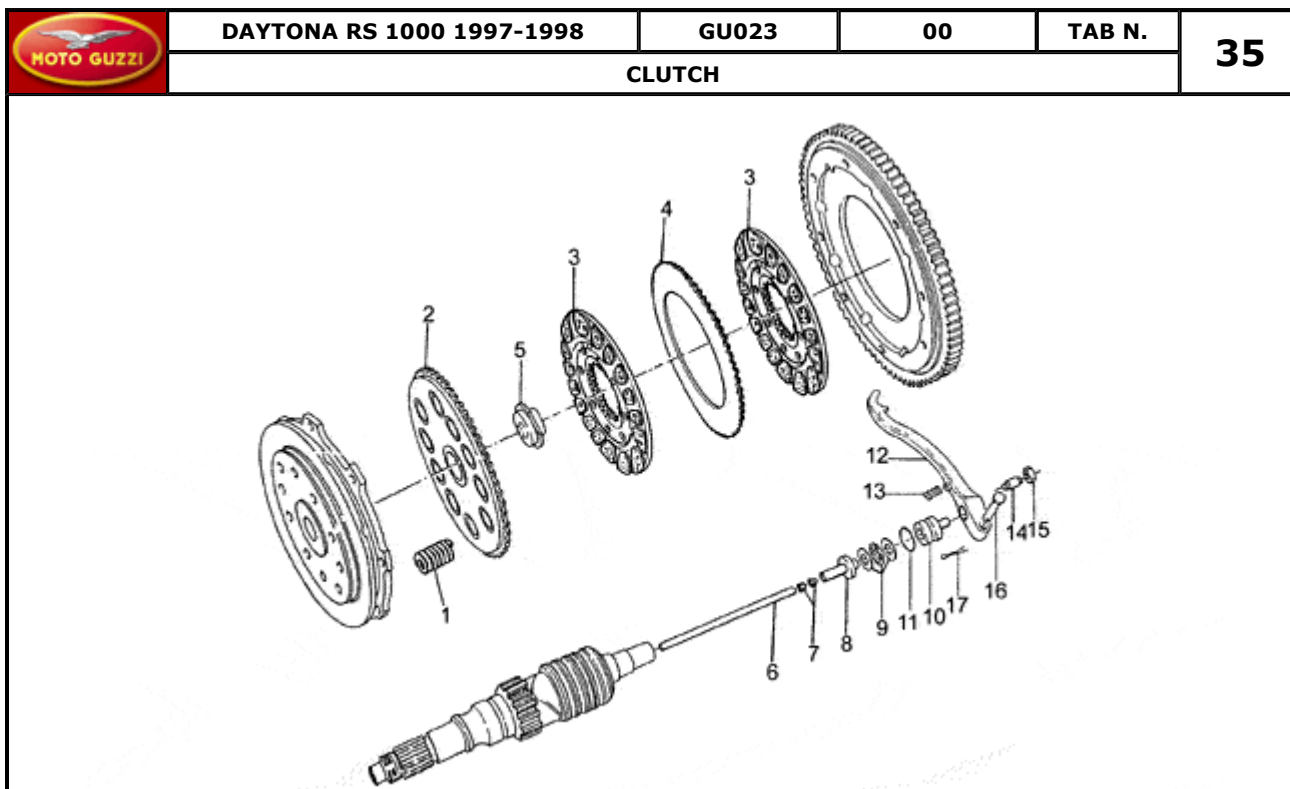


Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Clutch spring	-	-	-	-	GU13084100	10	
2	Disc	-	-	-	-	GU30082900	1	
3	Clutch plate complete	-	-	-	-	GU29084450	2	
4	Intermediate plate	-	-	-	-	GU12082300	1	
5	Cup	-	-	-	-	GU12082800	1	
6	Rod	-	-	-	-	GU14085700	1	
7	Bush	-	-	-	-	GU14085900	2	
8	Inner body	-	-	-	-	GU14086000	1	
9	Thrust bearing	-	-	-	-	GU12087001	1	
10	Outer body	-	-	-	-	GU14086100	1	
11	O-ring 17,13x2,62	-	-	-	-	GU90706170	1	
12	Clutch release shaft	-	-	-	-	GU14090202	1	
13	Lever return spring	-	-	-	-	GU94321105	1	
14	Adjuster screw	-	-	-	-	GU30090400	1	
15	Nut M8X1	-	-	-	-	GU92602508	1	
16	Pin 7x39	-	-	-	-	GU95780271	1	
17	Split pin	-	-	-	-	GU95500222	1	

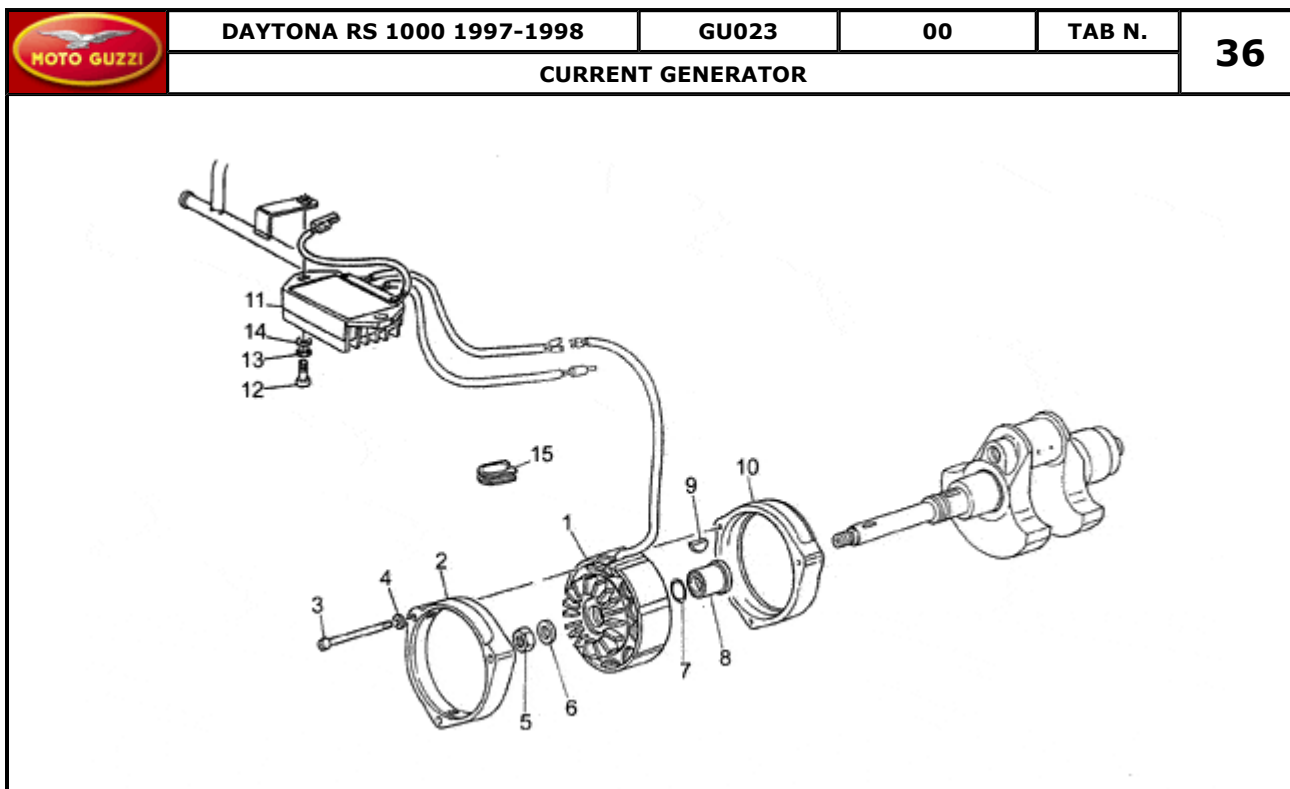

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Generator	-	-	-	-	GU37712405	1	
2	Front calotte	-	-	-	-	GU29711460	1	
3	Screw	-	-	-	-	GU98620265	3	
4	Washer 5,9X3X0,8	-	-	-	-	GU29217960	3	
5	Nut M16X1,5	-	-	-	-	GU92603516	1	
6	Washer 16,25x24,5x5	-	-	-	-	GU30714201	1	
7	O-ring 17,86X2,62	-	-	-	-	GU90706178	1	
8	Spacer	-	-	-	-	GU37712306	1	
9	Transmission key	-	-	-	-	GU91600450	1	
10	Rear cap	-	-	-	-	GU29711960	1	
11	Voltage regulator	-	-	-	-	GU37703805	1	
12	Hex socket screw M6X16	-	-	-	-	GU98622316	2	
13	Washer 6,4x10x0,7	-	-	-	-	GU14217901	2	
14	Washer	-	-	-	-	GU95000206	2	
15	Rubber spacer	-	-	-	-	GU19007700	1	


		DAYTONA RS 1000 1997-1998		GU023	00	TAB N.	37	
EXHAUST UNIT								
								
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	RH exhaust pipe	-	-	-	-	GU30120900	1	
2	LH exhaust pipe	-	-	-	-	GU30120901	1	
3	Flange	-	-	-	-	GU14121050	2	
4	Spacer	-	-	-	-	GU30121200	4	
5	Gasket	-	-	-	-	GU90718406	2	
6	Nut	-	-	-	-	GU92781081	4	
7	Washer 8,4X13X0,8	-	-	-	-	GU14615901	8	
8	Washer	-	-	-	-	GU95007208	4	
9	Plug	-	-	-	-	GU98110007	2	
10	Gasket	-	-	-	-	GU30109330	2	
11	Hose clamp	-	-	-	-	GU30123400	6	
12	Expansion chamber	-	-	-	-	GU37123905	1	
13	Exhaust pipe support	-	-	-	-	GU37127105	1	
14	Screw	-	-	-	-	GU98054412	2	
15	Washer	-	-	-	-	GU95100256	2	
16	Silent-block	-	-	-	-	GU93233030	2	
17	Under spacer	-	-	-	TN	GU30126700	2	
18	Upper spacer	-	-	-	TN	GU30126701	2	
19	Washer	-	-	-	-	GU95100239	4	
20	Screw	-	-	-	-	GU98054430	2	
21	RH footrest support	-	-	-	g.ghi	GU01444650	1	
22	LH footrest support	-	-	-	g.ghi	GU01444750	1	
23	Screw	-	-	-	-	GU98054418	2	
24	Washer	-	-	-	-	GU95100239	2	
25	Washer	-	-	-	-	GU95100256	4	
26	Nut M8X1,25	-	-	-	-	GU92602208	2	
27	RH pipe	-	-	-	-	GU30124700	1	
	RH pipe with catalyzer	-	-	CH	-	GU37124707	1	
28	LH pipe with catalyzer	-	-	CH	-	GU37124807	1	
	LH pipe	-	-	-	-	GU30124800	1	
29	RH silencer	-	-	-	-	GU30123001	1	
	RH silencer	-	-	CH	-	GU30123005	1	
30	LH silencer	-	-	-	-	GU30122901	1	


	LH silencer	-	-	CH	-	-	GU30122905	1
31	Plate	-	-	-	-	-	GU95187008	2
32	Screw	-	-	-	-	-	GU98822420	4
33	Nut	-	-	-	-	-	GU92630108	2
34	Screw M8x35	-	-	-	-	-	GU98230835	2
35	Rubber spacer	-	-	-	-	-	GU14103400	2
36	Spacer	-	-	-	-	-	GU91180817	2

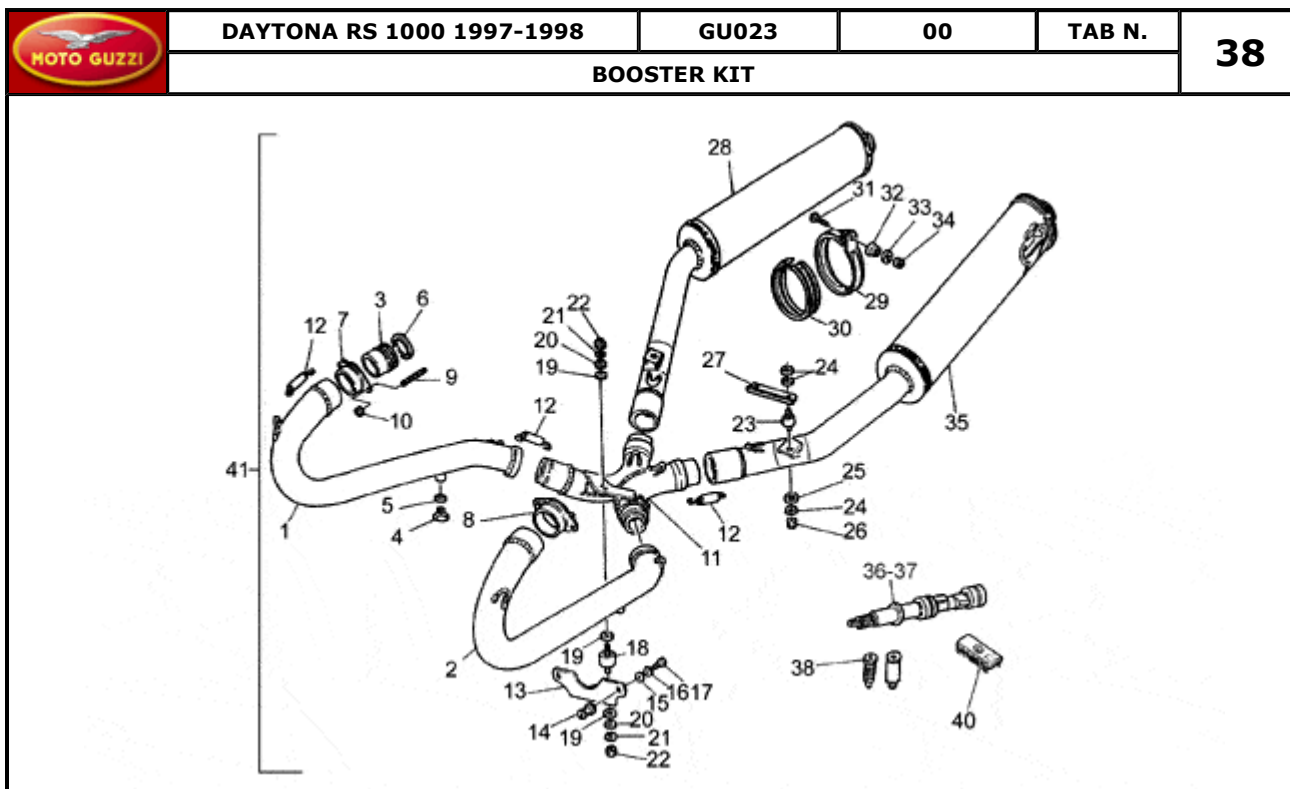

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	RH exhaust pipe	-	-	-	01198N	-	GU02120940	1
2	LH exhaust pipe	-	-	-	01198N	-	GU01120941	1
3	Filler cap	-	-	-	01198N	-	GU02121140	2
4	Plug	-	-	-	01198N	-	GU98110007	2
5	Gasket	-	-	-	01198N	-	GU30109330	2
6	Exhaust pipe gasket	-	-	-	01198N	-	GU90178370	2
7	RH flange	-	-	-	01198N	-	GU01121043	1
8	LH flange	-	-	-	01198N	-	GU01121042	1
9	Stud bolt M8X37,5	-	-	-	01198N	-	GU96508038	4
10	Nut	-	-	-	01198N	-	GU92630508	4
11	Exhaust manifold union	-	-	-	01198N	-	GU01123940	1
12	Spring	-	-	-	01198N	-	GU30127240	6
13	Front plate	-	-	-	01198N	-	GU01127141	1
14	Column nut	-	-	-	01198N	-	GU30128840	2
15	Washer 6,4x12x1,2	-	-	-	01198N	-	GU95100141	4
16	Notched washer	-	-	-	01198N	-	GU95021106	2
17	Screw	-	-	-	01198N	-	GU98054318	2
18	Silent-block	-	-	-	01198N	-	GU93123020	1
19	Washer teflon	-	-	-	01198N	-	GU30126740	2
20	Washer	-	-	-	01198N	-	GU95100239	2
21	Spring washer	-	-	-	01198N	-	GU95021108	2
22	Nut	-	-	-	01198N	-	GU92660208	2
23	Silent-block	-	-	-	01198N	-	GU93212521	2
24	Washer 6,4x12x1,2	-	-	-	01198N	-	GU95100141	8
25	Washer teflon	-	-	-	01198N	-	GU30126741	4
26	Nut	-	-	-	01198N	-	GU92660600	2
27	Plate	-	-	-	01198N	-	GU01126940	1
28	RH silencer	-	-	-	01198N	-	GU01123040	1
29	Silencer clip	-	-	-	01198N	-	GU01129440	2
30	Rubber spacer	-	-	-	01198N	-	GU01128140	2
31	Screw	-	-	-	01198N	-	GU98620450	2
32	Spacer	-	-	-	01198N	-	GU01128340	2
33	Washer	-	-	-	01198N	-	GU95100218	2


34	Nut	-	-	-	01198N	-	GU92630208	2
35	LH silencer	-	-	-	01198N	-	GU01122940	1
36	RH camshaft	-	-	CH-SGP-USA	01198N	-	GU30053340	1
37	LH camshaft	-	-	CH-SGP-USA	01198N	-	GU30053341	1
38	Sensor support	-	-	CH-SGP-USA	01198N	-	GU30163301	1
40	Eprom KL KIT 1	-	-	-	01198N	-	GU01727345	1
41	Booster kit	-	-	CH-SGP-USA	01198N	-	GU01976044	1
	Booster kit	-	-	-	01198N	-	GU01976043	1

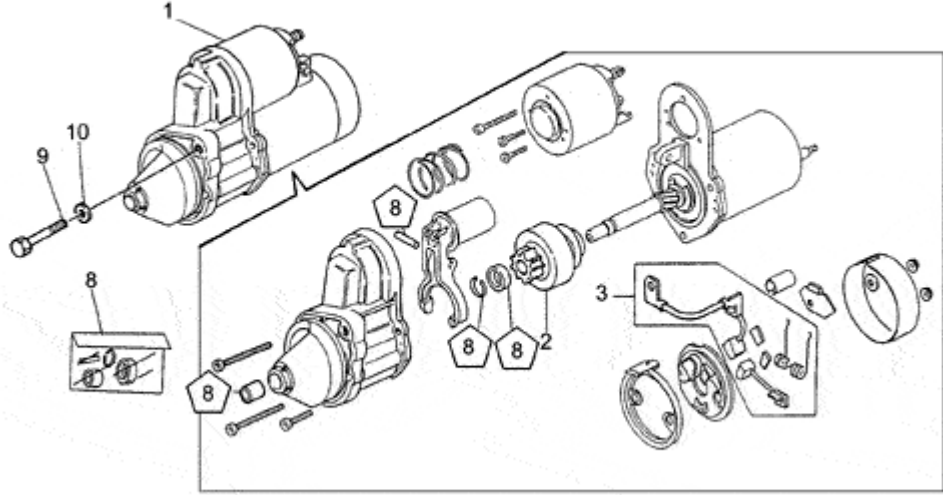
MOTO GUZZI		DAYTONA RS 1000 1997-1998	GU023	00	TAB N.	39			
		STARTER MOTOR							
									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	Starter motor Valeo	-	-	-	-	GU30730711	1		
2	Pinion assy	-	-	-	-	GU30530510	1		
3	Brush revision set	-	-	-	-	GU30530511	1		
8	Starter motor revision kit	-	-	-	-	GU30530512	1		
9	Hex screw M8X75	-	-	-	-	GU98052475	2		
10	Washer	-	-	-	-	GU95004208	2		

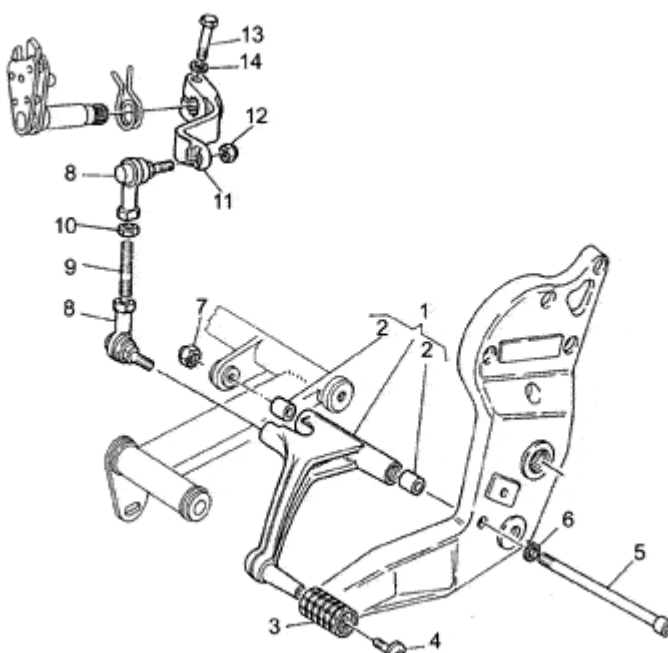MOTO GUZZI	DAYTONA RS 1000 1997-1998	GU023	00	TAB N.	40			
	GEAR LEVER							
								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.

1	Gear lever	-	-	-	-	g.ghi	GU30250845	1
2	Bush	-	-	-	-	-	GU30252000	2
3	Rubber spacer	-	-	-	-	-	GU14251001	1
4	Screw	-	-	-	-	-	GU98230616	1
5	Pin	-	-	-	-	-	GU98610410	1
6	Washer	-	-	-	-	-	GU95004208	1
7	Nut	-	-	-	-	-	GU92630208	1
8	Fork	-	-	-	-	-	GU28258160	2
9	Stud bolt	-	-	-	-	-	GU30257900	1
10	Nut	-	-	-	-	-	GU92602206	1
11	Lever	-	-	-	-	-	GU30258200	1
12	Nut M6x1	-	-	-	-	-	GU92630206	1
13	Hex screw M6X16	-	-	-	-	-	GU98054316	1
14	Special washer	-	-	-	-	-	GU61013800	1




	<b>DAYTONA RS 1000 1997-1998</b>	<b>GU023</b>	<b>00</b>	<b>TAB N.</b>	<b>41</b>
	<b>OIL PUMP</b>				

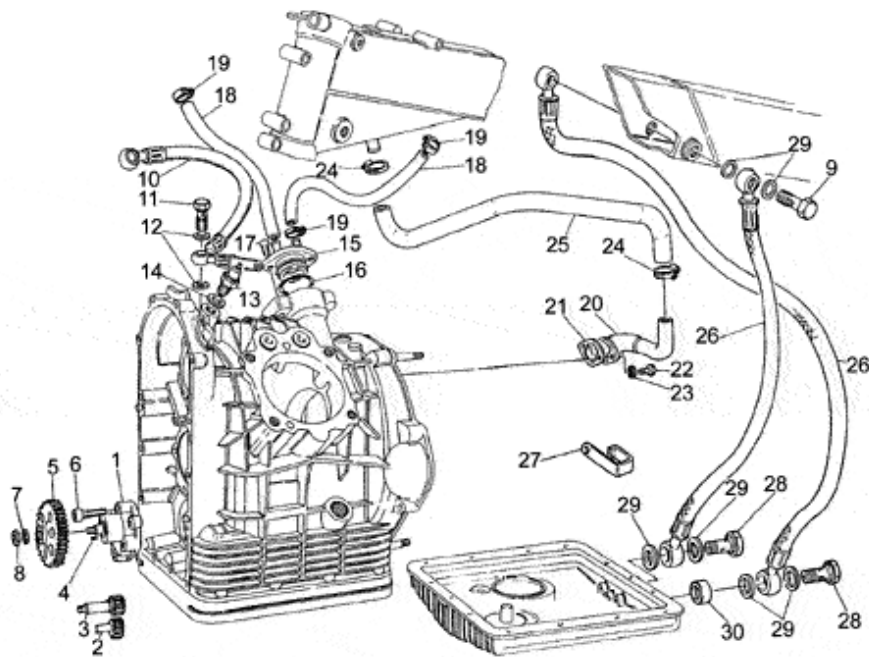

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Oil pump	-	-	-	-	GU30146401	1	
2	Oil pump gear	-	-	-	-	GU30148401	1	
3	Oil pump gear	-	-	-	-	GU30147801	1	
4	Transmission key	-	-	-	-	GU91701232	1	
5	Oil pump gear	-	-	-	-	GU30147701	1	
6	Screw	-	-	-	-	GU98622435	4	
7	Washer	-	-	-	-	GU30147000	1	
8	Nut	-	-	-	-	GU92602308	1	
9	Bored screw	-	-	-	-	GU95990084	2	
10	Pipe	-	-	-	-	GU30153600	1	
11	Screw	-	-	-	-	GU95990056	3	
12	Gasket	-	-	-	-	GU10528900	6	
13	Pressure sensor	-	-	-	-	GU17768750	1	
14	Gasket 12,25	-	-	-	-	GU12006400	1	
15	Plug	-	-	-	g.ghi	GU30018346	1	
16	O-ring	-	-	-	-	GU90706313	1	
17	Screw	-	-	-	-	GU98250820	2	
18	Pipe SAEJ30R9	-	-	-	-	GU00823952080	1	
19	Hose clamp	-	-	-	-	GU93305017	4	
20	Breather pipe	-	-	-	-	GU01007200	1	
21	Gasket	-	-	-	-	GU12007600	1	
22	Hex screw M6X20	-	-	-	-	GU98054320	2	
23	Washer 6,5x11x2	-	-	-	-	GU95120065	2	
24	Hose clamp	-	-	-	-	GU93305018	2	
25	Breather pipe	-	-	-	-	GU30157400	1	
26	Oil return pipe	-	-	-	-	GU01154600	2	
27	Pipe guide	-	-	-	-	GU01162800	1	
28	Oil pipe screw	-	-	-	-	GU01006600	2	
29	Gasket	-	-	-	-	GU10154200	10	
30	Spacer	-	-	-	-	GU91181613	2	


MOTO GUZZI	DAYTONA RS 1000 1997-1998	GU023	00	TAB N.	42			
	OIL COOLER							
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.

1	Oil cooler	-	-	-	-	GU01162000	1	
2	Water cooler protection	-	-	-	-	GU02582601	1	
3	RH clamp	-	-	-	-	GU01164200	1	
4	Screw	-	-	-	-	GU98230616	4	
5	Rubber spacer	-	-	-	-	GU91551132	4	
6	Screw	-	-	-	-	GU98230615	3	
7	Washer	-	-	-	-	GU95000206	4	
8	LH clamp	-	-	-	-	GU01164400	1	
9	Screw M6X20	-	-	-	-	GU98230621	1	
10	Pipe	-	-	-	-	GU01161600	1	
11	Oil pipe screw	-	-	-	-	GU01161700	4	
12	Gasket	-	-	-	-	GU10154200	9	
13	Oil return pipe	-	-	-	-	GU01162300	1	
14	Union	-	-	-	-	GU01162500	1	

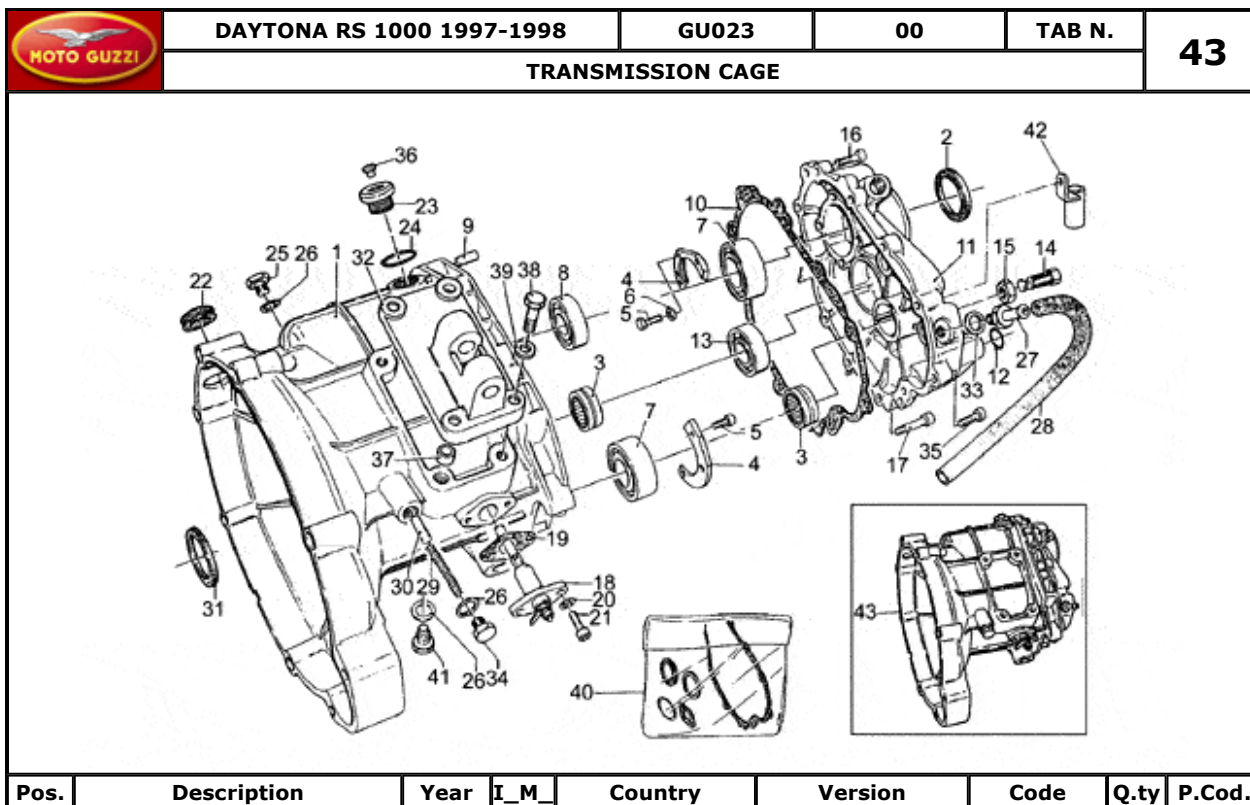

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Transmission cage	-	-	-	-	g.ghi GU30200245	1	
2	Gasket ring 35x47x7	-	-	-	-	GU90403547	1	
3	Roller bearing 17x35x15	-	-	-	-	GU92256218	2	
4	Plate	-	-	-	-	GU14213803	2	
5	Hex socket screw M6X16	-	-	-	-	GU98622316	6	
6	Washer 6,4x10x0,7	-	-	-	-	GU14217901	6	
7	Ball bearing AF/AS 25x52	-	-	-	-	GU92218424	2	
8	Roller bearing AS 17x47x14	-	-	-	-	GU92234717	1	
9	Pin	-	-	-	-	GU95512081	2	
10	Gasket	-	-	-	-	GU14201110	1	
11	Box cover	-	-	-	-	g.ghi GU30200845	1	
12	O-ring 13,95x2,92	-	-	-	-	GU90706140	1	
13	Ball bearing AP 17x47x14	-	-	-	-	GU92201417	1	
14	Screw	-	-	-	-	GU14237800	1	
15	Low nut M12x1,25	-	-	-	-	GU92602512	1	
16	Hex socket screw M6X25	-	-	-	-	GU98622325	9	
17	Screw M6X35	-	-	-	-	GU98620335	1	
18	Neutral indicator switch	-	-	-	-	GU12207200	1	
19	Gasket	-	-	-	-	GU12207700	1	
20	Washer 6,4x10x0,7	-	-	-	-	GU14217901	2	
21	Screw	-	-	-	-	GU98230615	2	
22	Plug	-	-	-	-	GU93180220	1	
23	Oil plug	-	-	-	-	GU12022600	1	
24	O-ring 20,24X2,62	-	-	-	-	GU90706203	1	
25	Oil level plug	-	-	-	-	GU95980214	1	
26	Gasket	-	-	-	-	GU10528900	3	
27	Oil breather valve	-	-	-	-	GU14204955	1	
28	Pipe	-	-	-	-	GU00823942070	1	
29	Lever return spring	-	-	-	-	GU94321067	1	
30	Pawl	-	-	-	-	GU55234700	1	
31	Gasket ring 35x47x7/6,5	-	-	-	-	GU90403548	1	
32	Gearbox housing support	-	-	-	-	GU30202345	1	
33	Gasket 8,25x15x1	-	-	-	-	GU12154200	1	
34	Plug	-	-	-	-	GU95980610	1	
35	Screw	-	-	-	-	GU98822325	1	

36	Plug	-	-	-	-	-	GU93180245	1
37	Bush	-	-	-	-	-	GU91181006	2
38	Screw M8X22	-	-	-	-	-	GU98054422	4
39	Washer	-	-	-	-	-	GU95004208	4
40	Gasket set	-	-	-	-	-	GU30999100	1
41	Oil unload plug M10X1	-	-	-	-	-	GU31003766	1
42	Support	-	-	-	-	-	GU30424660	1
43	Gear box assy	-	-	-	C1	-	GU01695050	1
	Gear box assy	-	-	-	C2	-	GU01695051	1
	Gear box assy	-	-	CH	-	-	GU400032802600	1

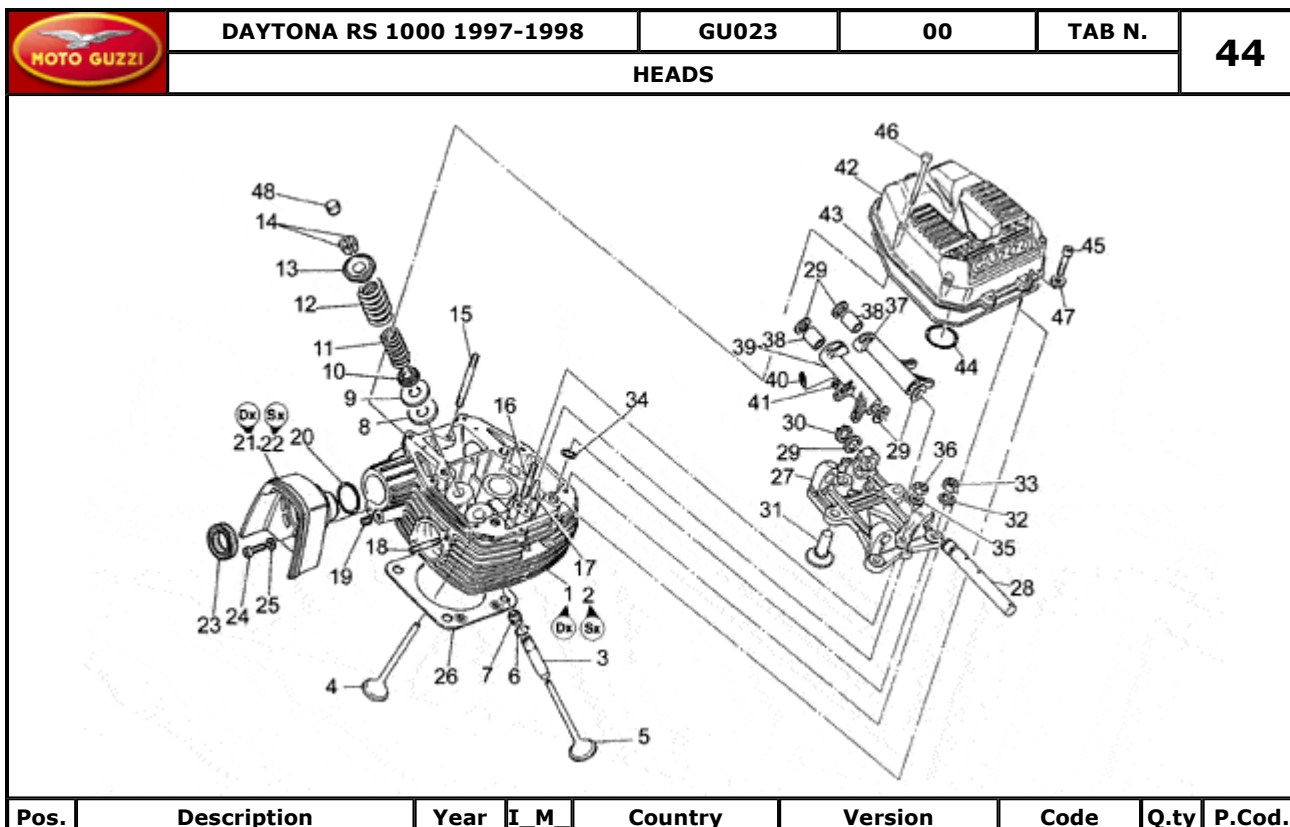

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	RH cylinder head	-	-	-	-	g.ghi	GU30022145	1
2	LH cylinder head	-	-	-	-	g.ghi	GU30022245	1
3	Valve guide	-	-	-	-	-	GU30036800	8
4	Intake valve	-	-	-	-	-	GU30036000	4
5	Exhaust valve	-	-	-	-	-	GU30036100	4
6	Snap ring	-	-	-	-	-	GU90353024	8
7	Oil seal	-	-	-	-	-	GU30037800	8
8	Spacer 1 mm	-	-	-	-	-	GU30037201	0
9	Spacer 1,5 mm	-	-	-	-	-	GU30037202	8
10	Lower cup	-	-	-	-	-	GU30037001	8
11	Inner spring	-	-	-	-	-	GU30037601	8
12	Outer spring	-	-	-	-	-	GU30037501	8
13	Upper cup	-	-	-	-	-	GU30038001	8
14	Half-cone	-	-	-	-	-	GU30038100	16
15	Stud bolt	-	-	-	-	-	GU96451450	2
16	Stud bolt	-	-	-	-	-	GU96451430	2
17	Pin	-	-	-	-	-	GU95512063	4
18	Stud bolt	-	-	-	-	-	GU96508052	4
19	Plug	-	-	-	-	-	GU98450513	2
20	O-ring	-	-	-	-	-	GU90706331	2
21	RH pulley cover	-	-	-	-	g.ghi	GU30002445	1
22	LH pulley cover	-	-	-	-	-	GU30002545	1
23	Gasket ring 25X40X7	-	-	-	-	-	GU90412541	2
24	Screw	-	-	-	-	-	GU98622320	2
25	Washer 6,15x11x0,8	-	-	-	-	-	GU95004206	2
26	Cylinder head gasket	-	-	-	-	-	GU30022000	2
27	Support plate	-	-	-	-	-	GU30034800	2
28	Rocker arms axis	-	-	-	-	-	GU30031800	4
29	Thrust washer 1 mm	-	-	-	-	-	GU30032300	12
	Thrust washer 1,2 mm	-	-	-	-	-	GU30032302	12
30	Circlip	-	-	-	-	-	GU90271012	4
31	Tappet	-	-	-	-	-	GU30045740	4
32	Washer	-	-	-	-	-	GU95000210	8

33	Nut M10X1,5	-	-	-	-	-	GU92603010	8
34	O-ring 9x2	-	-	-	-	-	GU90706094	8
35	Washer 8,4X13X0,8	-	-	-	-	-	GU14615901	4
36	Nut	-	-	-	-	-	GU92602008	4
37	Rocker arm cpl.	-	-	-	-	-	GU30030200	2
38	Bush	-	-	-	-	-	GU30030801	8
39	Rocker arm assy.	-	-	-	-	-	GU30030400	2
40	Adjuster screw	-	-	-	-	-	GU30034000	8
41	Nut	-	-	-	-	-	GU30034100	8
42	Head cover	-	-	-	-	g.ghi	GU30023546	2
43	Head cover gasket	-	-	-	-	-	GU30023700	2
44	O-ring	-	-	-	-	-	GU90706361	2
45	Hex socket screw M6X25	-	-	-	-	-	GU98622325	8
46	Hex socket screw M6X50	-	-	-	-	-	GU98620350	8
47	Washer 6,15x11x0,8	-	-	-	-	-	GU95004206	8
48	Valve lifter bucket	-	-	-	-	-	GU30045340	8